

ASSEMBLY INSTRUCTION

ITEM DESCRIPTION:

ITEM NO: FDS13 NAME: Dominic Outdoor Dining Table

MATERIAL TYPE: Teak Wood FINISH: Willow

ITEM NET WEIGHT: 274.3 LBS

Figure 1

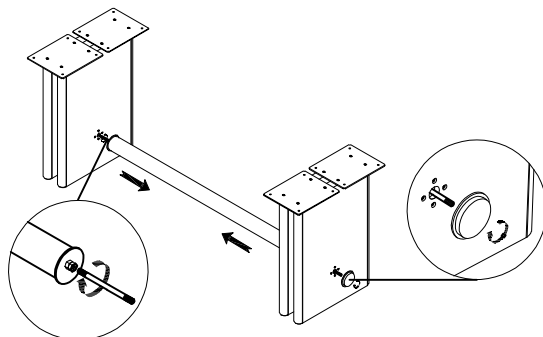


Figure 2


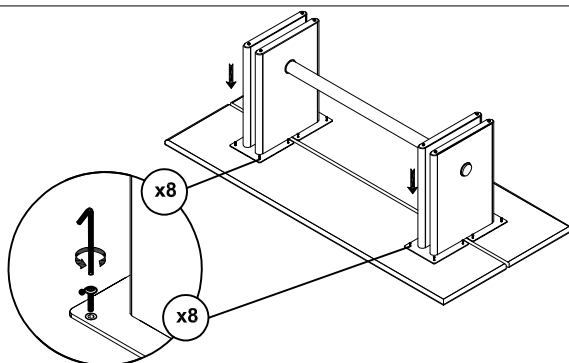


Figure 3



PARTS INCLUDED:

Parts	Qty
Top	1
Legs	2
Cross bar	1
Screw cap	2
Hanger bolts	2
Hexagon bolts	16
Allen key	1

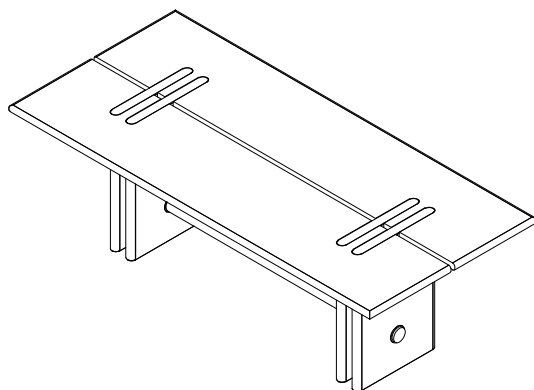

- Do not throw away packaging materials until assembly is complete.
- Assemble this item on a soft surface to protect finish.
- For safety, proper assembly requires two people.

TO ASSEMBLE:

- 1.Lift the table legs to move it align as figure 1.Using hand to attach the hanger bolts into the cross bar.After tightening all the bolts by hands smoothly, attach the legs and the cross bar. Using hand to tightening the screw cap with the hanger bolts
- 2.Place the top face down on the floor.Turn the table legs over and lift the table legs then place it onto the top, align as figure 2. Using hand to attach and turn all the bolts together into the thread holes. After tightening all the bolts by hands smoothly, using allen key to tighten all the bolts tighly to connect the base and the tabletop.
- 3.Two people are required to turn the table over and check the stability of the table, lift to move it to final position and finished

CARE INSTRUCTIONS:

Hardware may loosen over time. Periodically check that all connections are tight. Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.