


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

| | |
|----------------------------|-----------------------|
| ITEM NO.: 42080 | NAME: Diesel Sconce |
| MATERIAL TYPE: Brass, Iron | FINISH: Antique Brass |
| SOCKET TYPE: E26 | SOCKET QTY: 6 |
| BULB WATTAGE: 25W | |
| VOLTAGE: 110-120V | ITEM NET WEIGHT: 6LBS |

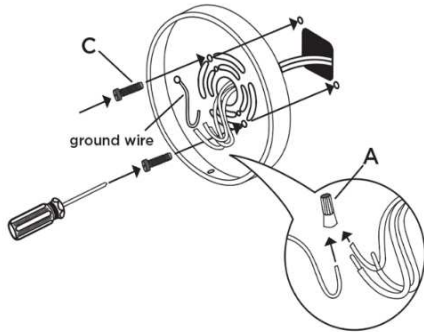

PARTS INCLUDED:

| | |
|-----------------|--------|
| Mounting Plate | Qty: 1 |
| Back Plate | Qty: 1 |
| Brass Shade | Qty: 1 |
| Socket Assembly | Qty: 1 |
| | |
| | |
| | |
| | |
| | |

HARDWARE INCLUDED:


| | |
|------------------------|--------|
| Mounting Screws | Qty: 2 |
| Plastic Wire Connector | Qty: 1 |
| | |

TOOLS NEEDED (Not Included):

| |
|---------------|
| 1 Screwdriver |
|---------------|

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

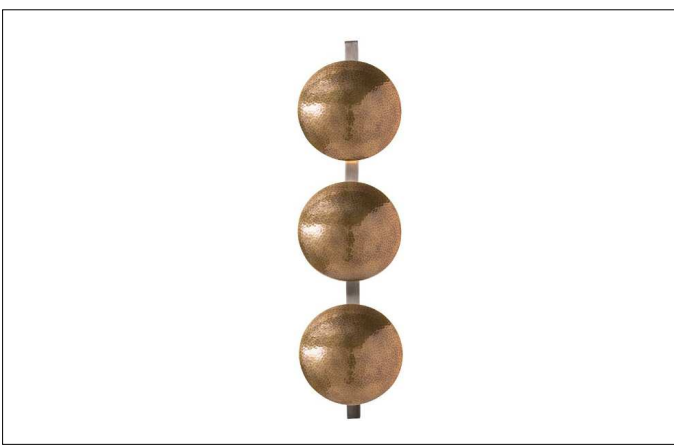

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate to wall or junction box using mounting screws (C).
3. Connect ground wire from wall to ground wire from lamp using wire caps (A).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
5. Attach front face of light to back plate by inserting canopy screws (B) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
6. Insert light bulb.
7. Restore power to junction box and test fixture.
DO NOT EXCEED SPECIFIED MAX WATTAGE.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS