

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 45086	NAME: Ashburn Pendant
MATERIAL TYPE: Buri Midrib	FINISH: Natural
SOCKET TYPE: E26	SOCKET QTY: 3
BULB WATTAGE: 60W/CFL 16W/LED 13W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 18LBS



PARTS INCLUDED:

A MOUNTING PLATE	Qty: 1
B CANOPY	Qty: 1
C COLLAR LOOP	Qty: 1
D RODS	Qty: 4
E LOCKING RING	Qty: 1
F SHADE	Qty: 1
G SOCKET ASSEMBLY	Qty: 3

HARDWARE INCLUDED:

H Plastic Wire Connector	2 Pcs	Canopy Screws	2 Pcs
Mounting Screws	2 Pc		
Green Ground Screw	1 Pc	Allen Wrench	1 Pc

TO INSTALL YOU WILL NEED:


- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Follow steps shown in figures 1-4.
4. Restore power to junction box and test fixture. Insert 60W bulb into SPECIFIED WATTAGE OF PENDANT.

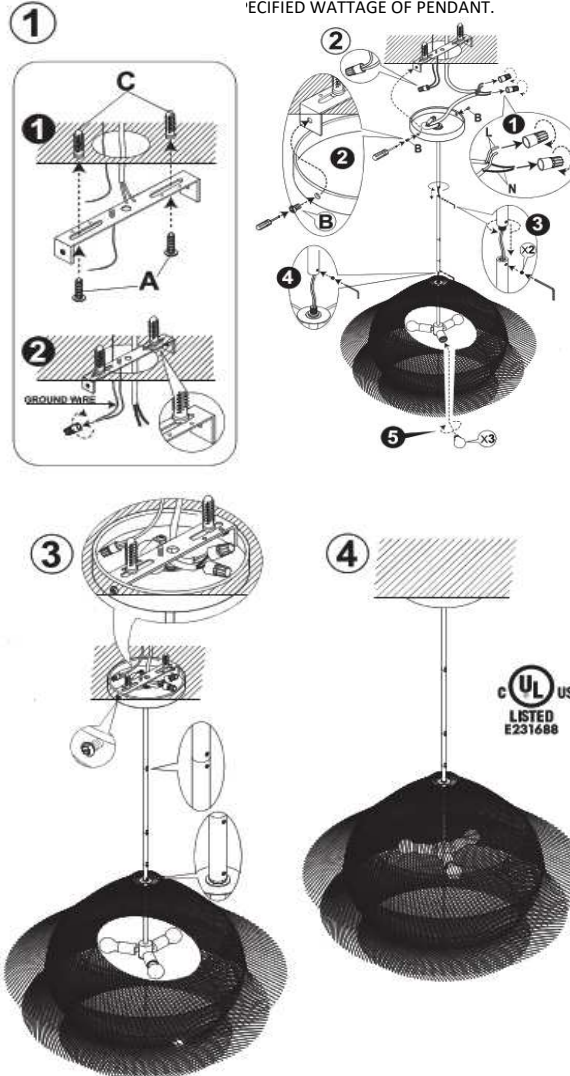

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS