


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 49132	NAME: Karina Sconce
MATERIAL TYPE: Seedy Glass	FINISH: Clear
SOCKET TYPE: E12	SOCKET QTY: 1
BULB WATTAGE: 60W/16W CFL/13W LED	
VOLTAGE: 110-120V	ITEM NET WEIGHT: 5.5LBS

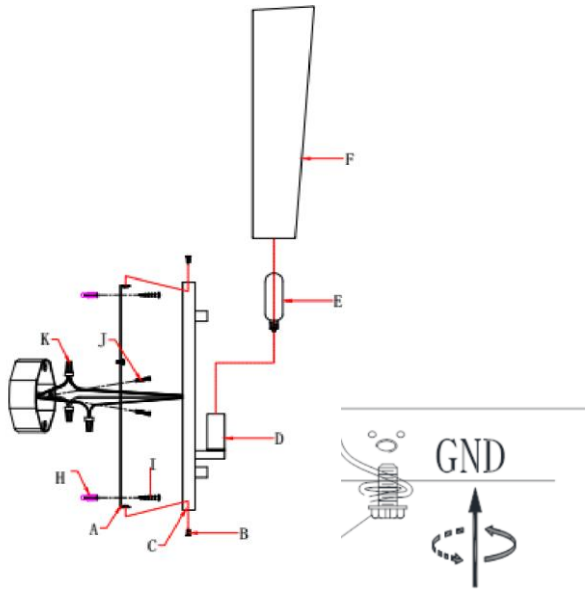

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1	Bulb (E)	Qty: 1
Set Screws (B)	Qty: 2	Glass Shade (F)	Qty: 1
Lamp Body (C)	Qty: 1	Strengthened Screw (I)	Qty: 4
Socket (D)	Qty: 1	Anchor (H)	Qty: 4

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2
Plastic Wire Connector (K)	Qty: 1

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully.
2. Please be sure you have all parts indicated before you begin assembly.
3. Shut off the main electrical supply from the main fuse box/circuit breaker.
4. Separate the mounting plate (A) from the lamp body (C) by removing the 2 set screws (B).
5. Insert the J-Box wires through the center opening of mounting plate.
6. Attach the mounting plate onto the wall J-Box.
7. Secure the mounting plate by turning the 2 mounting screws (J).
8. Connect the ground fixture wire to the ground J-Box wire using the plastic wire nut connector (K) and wrap the connecting with electrical tape. Be sure that no wire strands are exposed.
9. If the junction box does not have a ground wire, wrap the fixture's bare ground wire around the green ground screws and insert the screw into the mounting plate (A), marked as "GND" and tighten screw to secure the wire.
10. Connect the neutral fixture wire to the neutral J-Box wire first and then connect the hot fixture wire to the hot J-Box wire using the plastic wire nut connector (K). Wrap these connectors with electrical tape. Be sure that no wire strands are exposed.
11. Checking the wiring connections and if all looks good, gently tuck the wire connections neatly into the wall junction box.
12. If attached to a cement wall, use anchor (H) first then screw strengthened screws (I) into the anchor.
13. If attached to a wood wall, thread strengthened screw (I) directly into the wall.
14. Position the back plate over the mounting plate (A), secure the back plate by tightening 2 set screws (B).
15. Insert the specified light bulbs type T 60W (E) into the socket (D). DO NOT EXCEED SPECIFIED WATTAGE.
16. Attach the glass shade (F) onto the lamp body (C).
17. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS