


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 49246	NAME: Simba Sconce
MATERIAL TYPE: Steel	FINISH: Antique Brass
SOCKET TYPE: Integrated LED	SOCKET QTY: 1
BULB WATTAGE: 10W	
VOLTAGE: 110-120V	ITEM NET WEIGHT: 2.5LBS

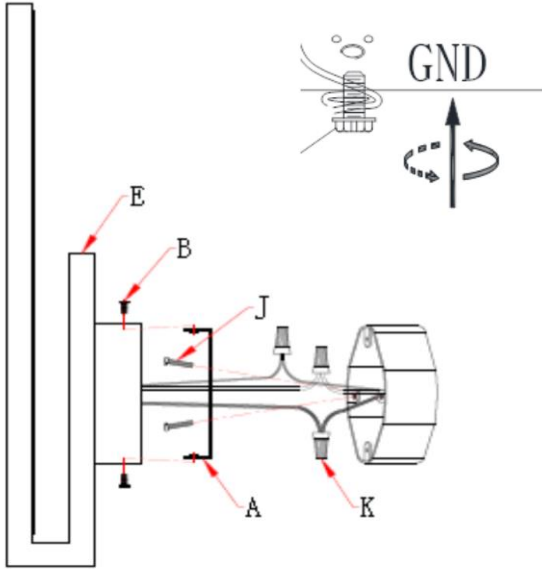

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1
Set Screws (B)	Qty: 4
Lamp Body (E)	Qty: 1

HARDWARE INCLUDED:


Mounting Screws (J)	Qty: 2
Plastic Wire Connector (K)	Qty: 1

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

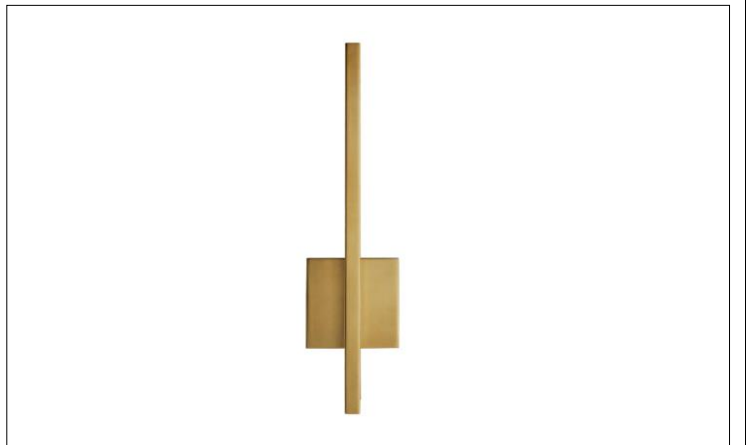

TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully.
2. Please be sure you have all parts indicated before you begin assembly.
3. Shut off the main electrical supply from the main fuse box/circuit breaker.
4. Separate the mounting plate (A) from the lamp body (E) by removing the 2 set screws (B).
5. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (E) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw.
7. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (E) and wrap the connection with electrical tape. Be sure not strands are exposed.
8. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (E) and wrap the connection with electrical tape. Be sure no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
9. Gently tuck the wire connections neatly into the ceiling junction box.
10. Attach the mounting plate (A) onto the wall J-Box using the enclosed mounting screws (J) and tighten screws with a screwdriver.
11. Position the back plate over the mounting plate (A), secure the back plate by tightening 4 set screws (B).
12. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS