

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: 49398 NAME: Inwood Single Sconce

MATERIAL TYPE: Microfiber FINISH: Ivory

SOCKET TYPE: E12 SOCKET QTY: 2

BULB WATTAGE: 40W/10W CFL/9W LED

VOLTAGE: 110-120V ITEM NET WEIGHT: 2LBS

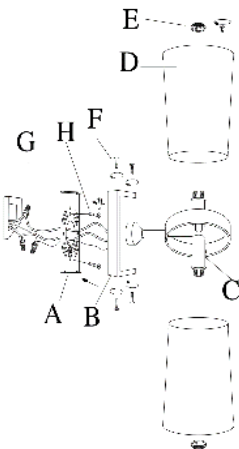

PARTS INCLUDED:

Mounting Plate (A) Qty: 1

Back Plate (B) Qty: 1

Socket Assembly (C) Qty: 1

Shade (D) Qty: 2

Socket Ring (E) Qty: 2

Plate Screw (F) Qty: 4

HARDWARE INCLUDED:

Plastic Wire Connector (G) Qty: 1

Mounting Screws (H) Qty: 2

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Please be sure you have all parts indicated before you begin assembly.

3. Turn off power to the junction box where the lamp will be installed.

4. Remove the mounting plate (A) from the back plate (B) by loose plate screws (F).

5. Pull the electrical cord of "J Box" through the exit hole of the mounting plate (A).

6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (G) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

7. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (G) and wrap the connection with electrical tape. Be sure no strands are exposed.

8. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (G) and wrap the connection with electrical tape. Be sure no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

9. Gently tuck the wire connections neatly into the ceiling junction box.

10. Attach the mounting plate (A) to the outlet box using the mounting screws (H). Tighten with a screwdriver.

11. Attach the back plate (B) to the mounting plate (A) using the enclosed plate screws (F). Tighten screws with a screwdriver.

12. Unscrew the socket ring (E) off the socket. Place the shade (D) on the socket and secure with socket ring (E) until tight. Repeat same operation on the other shade.

13. Install 2 type B 40W bulbs (or suitable CFL 10W/LED 9W bulbs, not included) into threaded socket. DO NOT EXCEED SPECIFIED WATTAGE.

14. Restore power to the junction box and test fixture.

15. Installation is complete.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOS