

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 49518

NAME: Rozuko Pendant

MATERIAL TYPE: Alabaster, Steel FINISH: White, English Bronze


SOCKET TYPE: E12

SOCKET QTY: 1

BULB WATTAGE: 8W

VOLTAGE: 110-120V

ITEM NET WEIGHT: 8.7LBS

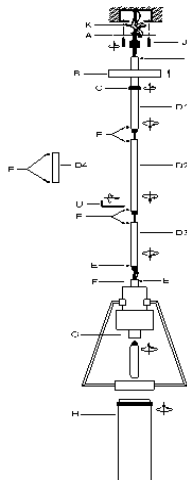

TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully.
2. Please be sure you have all parts indicated before you begin assembly.
3. Shut off main electrical supply from the main fuse box/circuit breaker.
4. Connect lamp body (F) and canopy (B) with rods (D1, D2, D3, D4), when you connect the rods, loosen the small set screws (E) first, then tighten with allen wrench (U) after all rods are connected. Be sure all the set screws are tight enough. Note: If you want the fixture to be semi-flush mount, you only need to connect alabaster shade (H) and canopy (B) with rod (D4).
5. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare wire is the grounded wire.
6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
7. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (K) and wrap the connection with electrical tape. Be sure no strands are exposed.
8. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
9. Gently tuck the wire connections (K) neatly into the ceiling junction box.
10. Attach the mounting plate (A) to the outlet box using the mounting screws (J) and tighten screws (J) with a screwdriver.
11. Push collar loop (C) in canopy (B) and tighten onto nipple in mounting plate (A) by turning in a clockwise direction.
12. Insert 1 type T LED 8W bulb (not included) into the socket (G). DO NOT EXCEED SPECIFIED WATTAGE.
13. Attach the alabaster shade (H) into lamp body (F), and tighten in a clockwise direction to secure the shade (H).
14. Restore power to the junction box and test fixture.

PARTS INCLUDED:

Mounting Plate (A) Qty: 1

Canopy (B) Qty: 1

Collar Loop (C) Qty: 1

Rods (D1, D2, D3, D4) Qty: 4

Set Screws (E) Qty: 9

Lamp Body (F) Qty: 1

Socket (G) Qty: 1

Alabaster Shade (H) Qty: 1

HARDWARE INCLUDED:

Mounting Screws (J)

Plastic Wire Connector (K)

Allen Wrench (U)

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS