


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 49648	NAME: Bindi Sconce
MATERIAL TYPE: Glass	FINISH: Opal
SOCKET TYPE: E12	SOCKET QTY: 1
BULB WATTAGE: 40W/10W CFL/9W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 4.5LBS

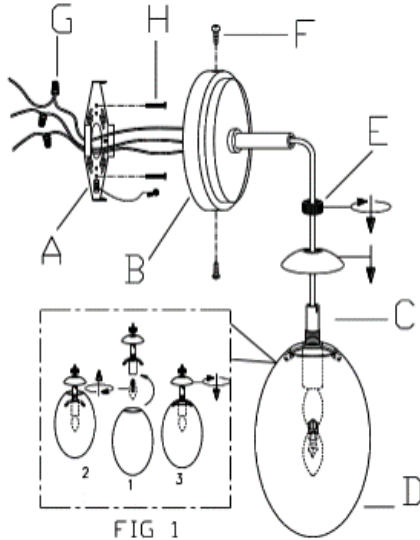

TO ASSEMBLE:

1. REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY
2. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
3. TURN OFF POWER TO THE JUNCTION BOX WHERE THE LAMP WILL BE INSTALLED
4. PULL THE ELECTRICAL CORD OF "J BOX" THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
5. AS FIG 1, UNSCREW THE METAL RING(E) OFF THE SOCKET ASSEMBLY(C), INSERT TYPE B 40W BULB (OR SUITABLE CFL 9W/LED 4W , NOT INCLUDED) IN THE SOCKET, THEN ATTACH THE GLASS SPHERE(D) TO THE SOCKET PROPERLY, THEN SCREW THE METAL RING(E) TO SECURE THE GLASS SPHERE TILL TIGHT.
6. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW . IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
7. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
8. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
9. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
10. ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(H). TIGHTEN WITH A SCREWDRIVER(I).
11. ATTACH THE BACK PLATE(B) TO THE MOUNTING PLATE(A) USING THE ENCLOSED PLATE SCREWS(F). TIGHTEN SCREWS WITH A SCREWDRIVER.
12. GENTLY LOWER THE SCONCE UNTIL THE CORD IS FULLY EXTENDED.
13. RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE
14. INSTALLATION IS COMPLETE.

PARTS INCLUDED:

(A) Mounting Plate	Qty: 1	(D) Glass Sphere	Qty: 2
(B) Back Plate	Qty: 1	(E) Metal Ring	Qty: 2
(C) Socket Assembly	Qty: 2	(F) Plate Screw	Qty: 4

HARDWARE INCLUDED:

Mounting Screws	2 Pcs
Plastic Wire Connector	2 Pc

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver
- Electrical Tape

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS