

# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 49686

NAME: Elyse Sconce

MATERIAL TYPE: Glass, Iron FINISH: Polished Nickel, Clear Ribbed


SOCKET TYPE: E12

SOCKET QTY: 2

BULB WATTAGE: 60W

VOLTAGE: 110-120V

ITEM NET WEIGHT: 3.5LBS

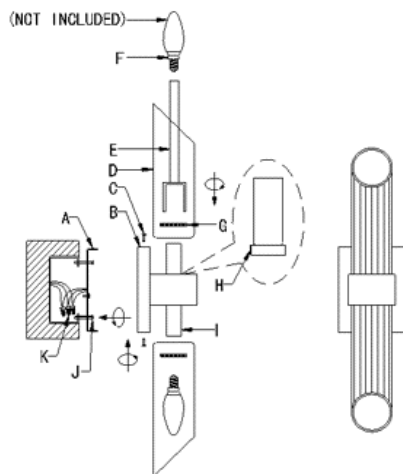

## PARTS INCLUDED:

Mounting Plate ( A ) Qty: 1

Back Plate ( B ) Qty: 1

Set Screw ( C ) Qty: 2

Glass ( D ) Qty: 2

Socket Ring Tool ( E ) Qty: 1

Bulb (Not included)(F) Qty: 2

Socket Ring ( G ) Qty: 2

Socket Tube ( H ) Qty: 2

Sockets ( I ) Qty: 2

## HARDWARE INCLUDED:

Mounting Screws ( J )

Plastic Wire Connector ( K )

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



## TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully.
2. Please be sure you have all parts indicated before you begin assembly.
3. Shut off the main electrical supply from the main fuse box/circuit breaker.
4. Gently pull the electrical cord from junction box, then pull the electrical cord from the back plate through the exit hole of the mounting plate (A).
5. Remove the mounting plate (A) from the back plate (B) by loosening the set screw (C).
6. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
7. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (E) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (E) and wrap the connection with electrical tape. Be sure no strands are exposed.
9. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (E) and wrap the connection with electrical tape. Be sure no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. Gently tuck the wire connections (K) neatly into the ceiling junction box.
11. Attach the mounting plate (A) to the outlet box using the mounting screws (J) and tighten screws with a screwdriver.
12. Attach the back plate (B) to the mounting plate (A) by using the set screws (C). Tighten screw with screwdriver.
13. Loosen the socket ring (G) from lamp body, put the glass (D) into the socket tube (H), and tighten glass (D) with socket ring (G) by using socket ring tool (E). Repeat the above operation on the other glass.
14. Insert 2 type B 60W bulbs or/CFL 12W or/LED 10W (not included) into sockets (I). DO NOT EXCEED SPECIFIED WATTAGE.
15. Restore power to the junction box and test fixture.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS