


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 49789	NAME: Middlebury Pendant
MATERIAL TYPE: Cotton	FINISH: Natural
SOCKET TYPE: E12	SOCKET QTY: 6
BULB WATTAGE: 60W or/CFL 16W or/LED 13W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 13.5LBS

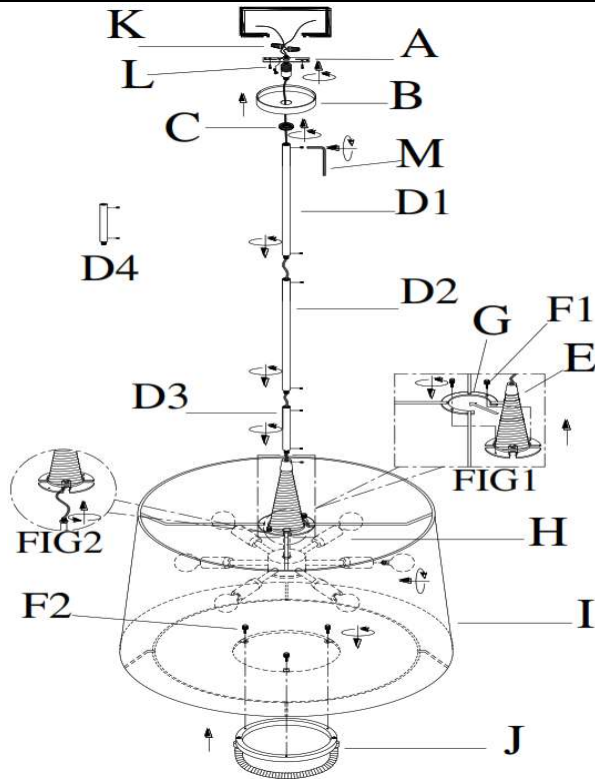

PARTS INCLUDED:

A) MOUNTING PLATE	1 PC	F) SET SCREW	5 PCS
B) CANOPY	1 PC	G) SHADE C SPIDER	1 PC
C) COLLAR LOOP	1 PC	H) SOCKET ASSEMBLY	1 PC
D1,D2,D3,D4) RODS	4 PCS	I) SHADE	1 PC
E) TAPER COLUMN	1 PC	J) FINIAL	1 PC

HARDWARE INCLUDED:

K) Plastic Wire Connector	M) Allen Wrench
L) Mounting Screws	Green Ground Screw

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Remove the mounting plate(a) from the canopy(b) by turning collar loop (c) in a counterclockwise direction.
4. Screw the rod(d3) onto the taper column(e) and tighten the hexagonal screw in the side desire hole by Allen wrench(m). Repeat the same operation on the rod (d1) and (d2). If the ceiling is high enough, pls assemble the rod(d4) if need.
5. As fig1, attach shade c spider(g) cover bottom plate of column(e) properly, align the holes and fix together by using set screws(f1) till tight.
6. As fig 2, screw the socket assembly(h) onto the bottom column till tight.
7. Connect the finial(j) to the bottom rim of shade(i) by using 3pcs set screws(f2) till secure.
8. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
9. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green) or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
10. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
11. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Gently truck the wire connections neatly into the ceiling junction box.
13. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (l) and tighten screws with a screwdriver.
14. Push collar loop in canopy (b) and thread onto nipple in mounting plate (a) by turning in a clockwise
15. Screw rod (d1) to the canopy (b) by using hexagonal screw and Allen wrench(m) be sure all the hexagonal screws are tight enough.
16. Insert 6 type g 60w bulbs (or suitable cfl 16w/led 13w bulbs, not included) in the socket. Do not exceed specified wattage.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS