
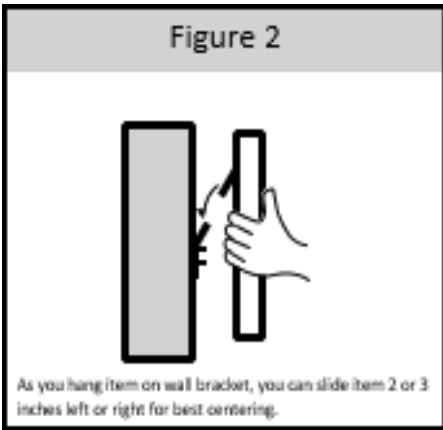


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 5700 NAME: Norm Console  
MATERIAL TYPE: Veneer/Wood FINISH: Tortoise Burl  
ITEM NET WEIGHT: 40 lbs

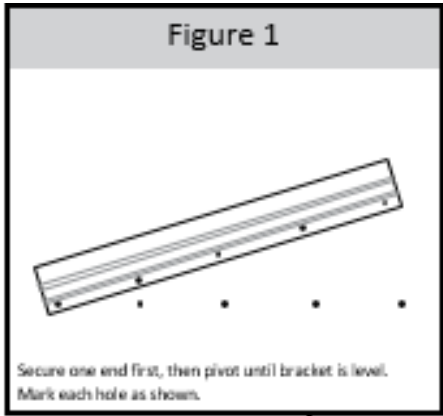

## TO ASSEMBLE:

1. Position console in desired location on wall.
2. Position security cleat in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Remove security cleat from the wall.
4. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counterclockwise to remove screw. Anchor will remain embedded in wall.
5. Place security cleat over anchors and insert; then tighten all screws.
6. Hang console on wall bracket, as shown in Figure 2.

## PARTS INCLUDED:

Console	QTY: 1
Security Cleat	QTY: 1
Anchors	QTY: 6
Screws	QTY: 6

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.