

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:



ITEM NO.: 5733

NAME: Mowgli Mirror

MATERIAL TYPE: Abaca

FINISH: Tobacco Stained

ITEM NET WEIGHT: 33.84LBS

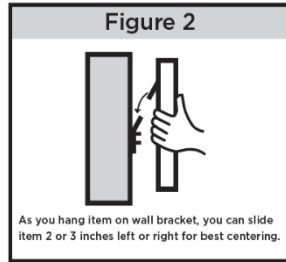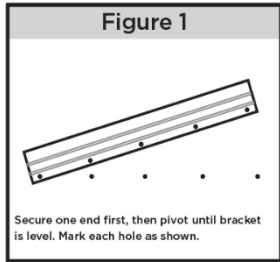

- Do not throw away packaging materials until assembly is complete.
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- This mirror can be mounted vertically and horizontally.

TO ASSEMBLE:

1. Position mirror in desired location on wall.
2. Position metal cleat (B) in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Remove metal cleat (B) from the wall.
4. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
5. Place metal cleat (B) over anchors and insert; then tighten all screws.
6. Hang mirror on wall bracket, as shown in Figure 2.

PARTS INCLUDED:

(A) Mirror	Qty: 1
(B) Security Cleat	Qty: 2
(C) Drywall Anchors	Qty: 4
(D) Screw	Qty: 4

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS