



ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 6978 NAME: Pierson Wall Plaques

MATERIAL TYPE: Mangowood FINISH: Whitewash

ITEM NET WEIGHT: 27LBS

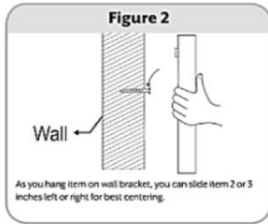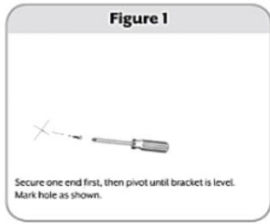

- Do not throw away packaging materials until assembly is complete.
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- This wall decor can be mounted vertically or horizontally.

TO ASSEMBLE:

1. Position wall decor in desired location on wall.
2. Position sawtooth hanger in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
4. Place sawtooth hanger over anchors and insert; then tighten all screws.

PARTS INCLUDED:

(A) Wall Décor	Qty: 3
(B) Dry Wall Anchors	Qty: 3
(C) Screws	Qty: 3

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOORS