


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 89480	NAME: Harriet Chandelier
MATERIAL TYPE: Steel/Glass	FINISH: Antique Brass/Frosted
SOCKET TYPE: E12	SOCKET QTY: 8
BULB WATTAGE: 60W/16W CFL/13W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 46.75LBS

FIG.2

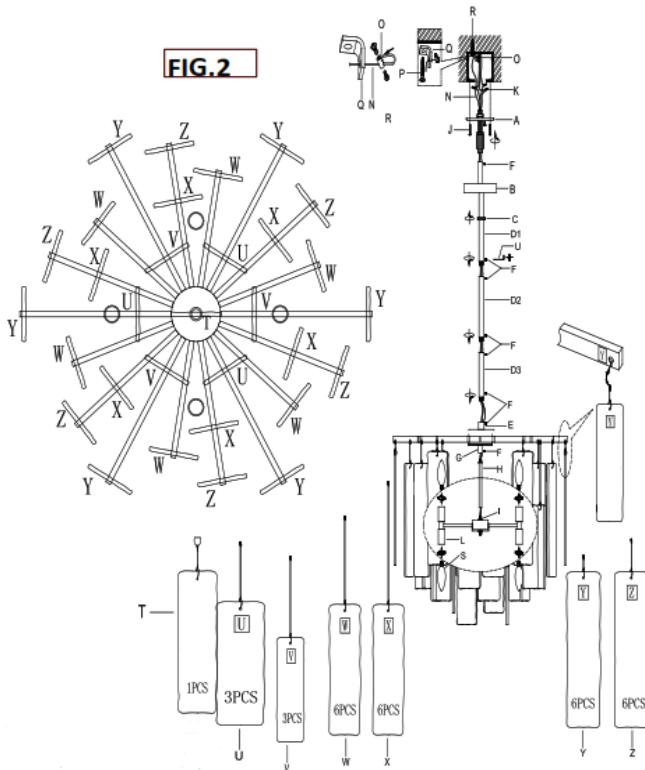

PARTS INCLUDED:

A MOUNTING PLATE	1 PC	O COUPLING	1 PC
B CANOPY	1 PC	P STRENGTHEN SCR 1 PC	
C COLLAR LOOP	1 PC	Q BRACKET	1 PC
D1,D2,D3 RODS	3 PCS	S BULB (NOT INCLUDE 8 PCS)	
E LAMP BODY	1 PC	T GLASS1	1 PC
F HEX SCREWS	8 PCS	U GLASS2	3 PCS
G LATHE PART	1 PC	V GLASS3	3 PCS
H BEADED PIPE	1 PC	W GLASS4	6 PCS
I JUNCTION BOX	1 PC	X GLASS5	6 PCS
L SOCKETS	8 PCS	Y GLASS6	6 PCS
N STEEL ROPE	1 PC	Z GLASS7	8 PCS

HARDWARE INCLUDED:

K Plastic Wire Connector	U Allen Wrench
J Mounting Screws	Green Ground Screw

TO INSTALL YOU WILL NEED:

- 2 people recommended
 - Phillips Screwdriver
- We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Please be sure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Connect the junction box(i) to the lathe part(g) by tighten both ends of the beaded pipe(h) in a clockwise direction, and then tighten hex screws(f) with an Allen wrench(u).
4. Connect lamp body(e) and canopy(b) with rods (d1, d2, d3,). when you connect the rods, loosen the small hex screws(f) first then tighten with Allen wrench(u) after all rods are connected. Be sure all the hexagonal screws are tight enough.
5. Remove the mounting plate(a) from the canopy(b) by turning collar loop (c) in a counterclockwise direction.
6. Attached the steel rope(n) to the junction box on the ceiling with the bracket(q), and fix with the strengthen screw(p) as fig. (if the ceiling is wall, you need drill a hole and insert the anchor (r) to the wall first; then repeat above step 7.) Be sure to tighten two screws attached on the coupling(o).
7. Pull the electrical cord of "j-box" through the exit hole of the mounting plate.
8. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
9. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw(h) into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
10. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
11. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Gently tuck the wire connections neatly into the ceiling junction box.
13. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (j) and tighten screws with a screwdriver.
14. Push collars loop up to canopy (b) and tighten onto nipple in mounting plate (a) by turning in a clockwise to secure canopy.
15. Insert 8 type t 60w bulb (or cfl 13w or led 8w, not included) into the sockets(l). do not exceed specified wattage.
16. Attach the glass(t) on the bottom of the junction box(i), then attach glass (u, v, w, x, y, z) into the holes of the arm as fig.2. Pls start from inside to outside). Note: when the assembly is completed, remove all sticker on the glass.
17. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

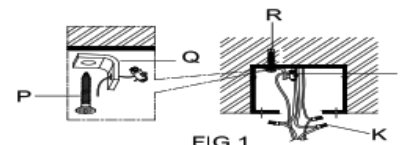


FIG 1