


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 89491	NAME: Nebula Chandelier
MATERIAL TYPE: Steel/Glass	FINISH: Antique Brass/Smoke
SOCKET TYPE: E12	SOCKET QTY: 8
BULB WATTAGE: 60W/16W CFL/13W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 94LBS

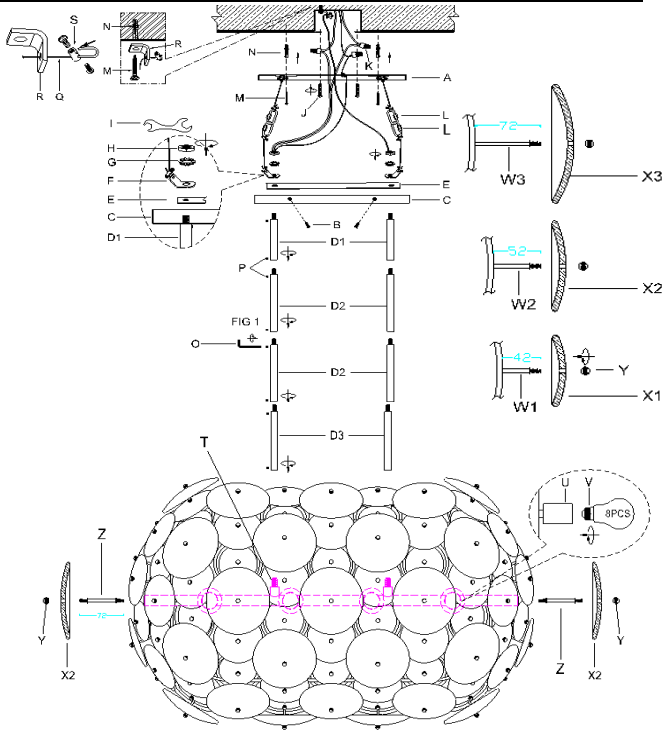

PARTS INCLUDED:

A MOUNTING PLATE	1 PC	S COUPLING	1 PC
B CANOPY SCREWS	4 PCS	T LAMP BODY	1 PC
C CANOPY	1 PC	U SOCKETS	8PCS
D1,D2,D3 RODS	8 PCS	V BULB (NOT INCLUDE 8PCS)	
E METAL PLATE	1 PC	W1 SHORT THREADED 60PCS	
F HOOK	2 PCS	W2 MEDIUM THREAD 62PCS	
G LOCK WASHER	2 PCS	W3 LONG THREADED 40PCS	
H HEX NUT	2 PCS	X1 SMALL GLASS	60PCS
L QUICK LINK	2 PCS	X2 MEDIUM GLASS	62PCS
N ANCHOR	3 PCS	X3 LARGE GLASS	40PCS
P HEX SCREWS	16 PCS	Y TURN-KNOBS	162PCS
Q STEEL ROPE	1 PC	Z THREADED PIPE	2PCS
R BRACKET	1 PC		

HARDWARE INCLUDED:

K Plastic Wire Connector	U Allen Wrench
J Mounting Screws	Green Ground Screw

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Please be sure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Connect lamp body(t) and canopy(c) with rods (d1, d2, d3) when you connect the rods, loosen the small hex screws(p) first then tighten with Allen wrench(o) after all rods are connected. Be sure all the hexangular screws are tight enough.
4. Place the metal plate(e), hook (f), lock washer(g), hex nut(h) on the canopy (c), then secure with wrench(i) as fig. 2.
5. Drill 1 hole inside the junction box and fasten the bracket(r) to wall by screwing the strengthen screws(m) into drilled hole. If attach to cement ceiling, use anchor(n) first then screw strengthened screws(m) into the anchor. If attach to wood ceiling, thread strengthened screw(m) directly into ceiling. Pass the steel rope(q) through the hole of bracket(r) and pass the steel rope(q) through the 2 holes of coupling then fix with 2pcs screws provided in the coupling(s) as fig. 1. Be sure to tighten two screws attached on the coupling(n).
6. Pull the electrical cord from canopy through the exit hole of the mounting plate(a).
7. Drill 2 holes in wall in line with 2 holes of mounting plate(a), insert anchors(n) into drilled holes. Fasten mounting plate(a) to wall by screwing the 2 strengthen screws(m) provided in the anchors(n).
8. Attach the mounting plate (a) to the outlet by box using the mounting screws(j).
9. Hang the lamp body to the mounting plate (a) by locking 2pcs quick link(l) together and repeat the same operation on the other side, then allow the lamp body to hang.
10. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
11. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (i) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw(h) into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
12. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (i) and wrap the connection with electrical tape. Be sure no strands are exposed.
13. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (i) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
14. Gently tuck the wire connections neatly into the ceiling junction box.
15. Attach the canopy(c) to the mounting plate(a) using the enclosed canopy screws(b). secure the canopy by tightening 2 canopy screws(b).
16. Insert 8 type a 60w or/cfl 12w or/led 10w bulb (not included) (v) into the sockets(u).do not exceed specified wattage.
17. Attached the small glass(x1) to the short-threaded pipe(w1) and secure by turn-knobs (y). Then repeat the same operation on the other glasses.
18. Attached the medium glass(x2) to the medium threaded pipe(w2) and secure by turn-knobs (y). Then repeat the same operation on the other glasses.
19. Attached the large glass(x3) to the long-threaded pipe(w3) and secure by turn-knobs (y). Then repeat the same operation on the other glasses.
20. Lastly, screw the threaded pipe(z) on the left and right sides of the lamp body(t) till tight, then attached the medium glass(x2) to the threaded pipe(z) and secure by turn-knobs (y).
21. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS