

ASSEMBLY INSTRUCTIONS

ITEM NUMBER #89496 | CHANDELIER

ITEM DESCRIPTION

MATERIAL TYPE:WOOD/STEEL/LINEN-COTTON FINISH :GRAY/ANTIQUE BRASS/PURE WHITE
 SOCKET TYPE: E26 CERAMIC SOCKET QTY:4 TOP COAT/SEALANT:
 BULB TYPE: TYPE A BULB WATTAGE: 40W or/CFL 10W or/LED 9W
 ITEM NET WEIGHT: VOLTAGE:110V-120V

UL COMPLAINT
 INSTALLATION ENVIRONMENT:SUITABLE FOR DAMP LOCATIONS








NOTE:

*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
 *THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


PARTS

A	MOUNTING PLATE	1 PC
B	CANOPY	1 PC
C	WRENCH	1 PC
D	HEX NUT	2 PCS
E	SPRING WASHER	2 PCS
F	WASHER	2 PCS
G	RODS	8 PCS
H	MAIN BODY	1 PC
I	SHADE	1 PC
J	CANOPY SCREW	6 PCS

INCLUDED ASSEMBLY HARDWARE

K Plastic wire connectors 	L mounting screws 	M allen wrench 
N anchor 	O strengthened screw 	

PRODUCT ASSEMBLY

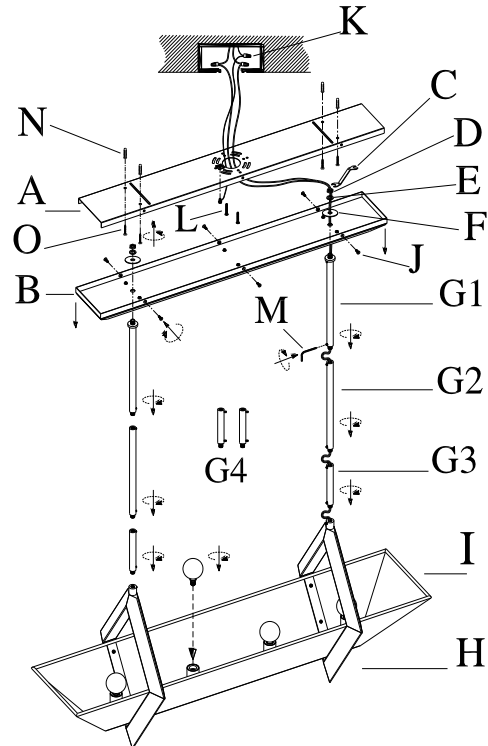

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S) CAREFULLY
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
- 3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEING ASSEMBLY
- 4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
- 5.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY LOOSING 6PCS CANOPY SCREWS(J)
6. SCREW THE ROD(G3) ONTO THE MAIN BODY(H) ,AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE DESIRE HOLE BY ALLEN WRENCH(M) AND SCREW THE ROD (G1) AND (G2). IF THE CEILING IS HIGH ENOUGH ,PLS ASSEMBLE THE ROD(G4)IF NEED.
- 7.PASS THE TIP END OF ROD(G1)THROUGH THE CANOPY(B),WASHER(F) ,SPRING WASHER(E), AND THEN TIGHEN HEX NUT(D) USING WRENCH(C). BE ENSURE PASS THROUGH THE CORD AS SHOWN. REPEAT THE ABOVER OPERATIONS(6) AND (7) ON ANOTHER SIDE.
- 8.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
9. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 11.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. GENTLY TRUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 13.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (L) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
- 14.IF ATTACH TO CEMENT CEILING, USE ANCHOR(N) FIRST THEN SCREW STRENGTHENED SCREWS(O)INTO THE ANCHOR.
- 15.IF ATTACH TO WOOD CEILING,THREAD STRENGTHENED SCREW(O)DIRECTLY INTO CEILING
16. PUSH MOUNTING PLATE(A) IN CANOPY (B) AND THREAD 6PCS CANOPY SCREWS(J) TILL TIGHT. BE SURE ALL THE HEXANGULAR SCREWS WERE TIGHT ENOUGH.
- 17.INSERT 4 TYPE A 40W BULBS(OR SUITABLE CFL 10W/LED 9W BULBS ,NOT INCLUDED) IN THE SOCKETS. DO NOT EXCEED SPECIFIED WATTAGE.

*PLS NOTE THE SHADE(I) IS PRE-ASSEMBLED.BE CAUTION NO TOUCH IT OR HANDLE GENTLY WHEN ASSEMBLING.

CARE & MAINTENANCE

FOR CUSTOMER SERVICE QUESTION CALL 1-800-338-2150
 ARTERIORS HOME:972.488.9800
 ARTERIORS CONTRACT:972.488.9800 EXT.321

DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTIONAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS