

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: 89662 NAME: Raine Chandleier

MATERIAL TYPE: Steel FINISH: Antique Brass

SOCKET TYPE: E12 SOCKET QTY: 7

BULB WATTAGE: 60W/16W CFL/13W LED

VOLTAGE: 110-120 V ITEM NET WEIGHT: 60LBS

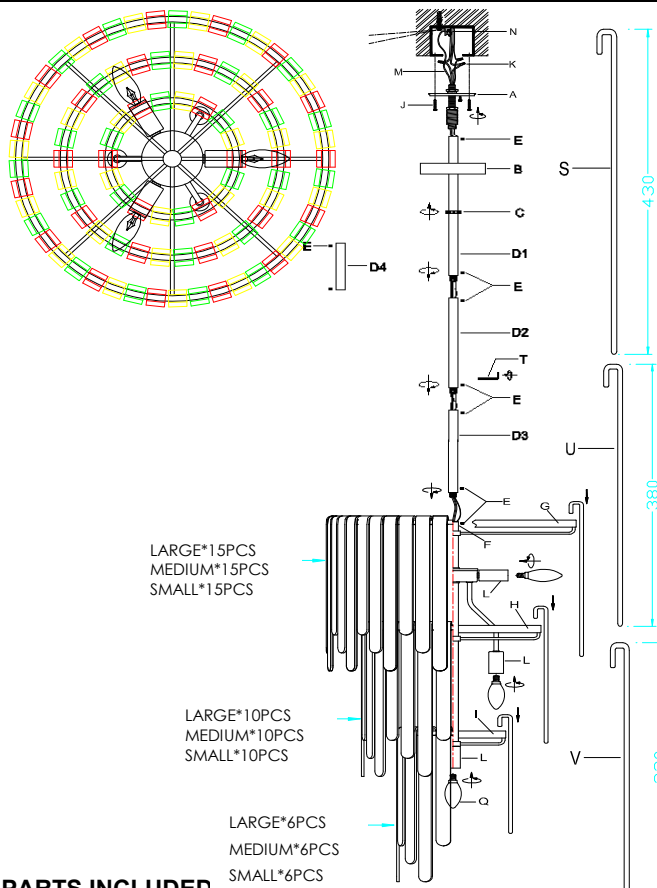

PARTS INCLUDED

(A) MOUNTING PLATE	1 PC	(L) SOCKETS	7 PCS
(B) CANOPY	1 PC	(M) STEEL ROPE	1 PC
(C) COLLAR LOOP	1 PC	(N) COUPLING	1 PC
(D1,D2,D3,D4) RODS	4 PCS	(O) STRENGTHEN SCREW	1 PC
(E) HEX SCREWS	9 PCS	(P) BRACKET	1 PC
(F) LAMP BODY	1 PC	(Q) BULB (NOT INC.)	7 PCS
(G) TOP IRON RING	1 PC	(S) LARGE GLASS	31 PCS
(H) MEDIUM IRON RING	1 PC	(U) MEDIUM GLASS	31 PCS
(I) BOTTOM IRON RING	1 PC	(V) SMALL GLASS	31 PCS

HARDWARE INCLUDED:


(K) Plastic Wire Connector	(T) Allen Wrench
(J) Mounting Screws	Green Ground Screw

TO INSTALL YOU WILL NEED:

- 2 people recommended
 - Phillips Screwdriver
- We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Remove all packing contents from the carton(s) carefully. Please be sure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Connect lamp body(f) and canopy(b) with rods (d1, d2, d3, d4) when you connect the rods, loosen the small hex screws (e) first then tighten with Allen wrench(t) after all rods are connected. Be sure all the hexangular screws are tight enough.
4. Remove the mounting plate(a) from the canopy(b) by turning collar loop (c) in a counterclockwise direction.
5. Drill 1 hole inside the junction box and fasten the bracket(p) to wall by screwing the strengthen screws(o) into drilled hole as fig 1. If attach to cement ceiling, use anchor(r) first then screw strengthened screws(o) into the anchor. If attach to wood ceiling, thread strengthened screw(o) directly into ceiling. Pass the steel rope(m) through the hole of bracket(p) and pass the steel rope(m) through the 2 holes of coupling(n), then fix with 2pcs screws provided in the coupling(n) as fig 2. Be sure to tighten two screws attached on the coupling(n).
6. Pull the electrical cord of jbox through the exit hole of the mounting plate.
7. Carefully inspect the pendant's fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
8. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw(h) into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
9. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
10. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
11. Gently tuck the wire connections neatly into the ceiling junction box.
12. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (j) and tighten screws with a screwdriver.
13. Push collars loop up to canopy (b) and tighten onto nipple in mounting plate (a) by turning in a clockwise to secure canopy.
14. Insert 7 type b 60w bulb(q) (or cfl 13w or led 8w, not included) into the sockets (l).do not exceed specified wattage.
15. Put large glass (s) medium glass (u) and small glass(v) in sequence onto top iron ring (g) carefully, then repeat the same operation on the other glasses, adjust the glass in a comfortable space.
16. Put large glass (s) medium glass (u) and small glass(v) in sequence onto medium iron ring (h) carefully, then repeat the same operation on the other glasses adjust the glass in a comfortable space.
17. Put large glass (s) medium glass (u) and small glass(v) in sequence onto bottom iron ring (i) carefully then repeat the same operation on the other glasses adjust the glass in a comfortable space.
18. Restore power to the junction box and test fixture.

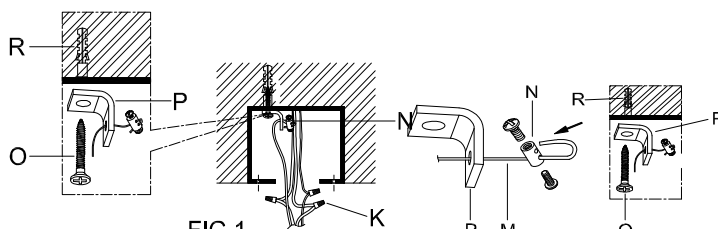

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

FIG.2

For customer service questions call 1-800-338-2150

ARTERIO RS