

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: 9630

NAME: Von-Webber Mirror

MATERIAL TYPE: Alabaster

FINISH: White

ITEM NET WEIGHT: 50LBS

PRODUCT ASSEMBLY

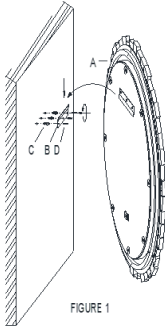


FIGURE 1

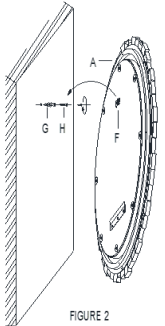


FIGURE 2

PARTS INCLUDED:

(A) Mirror	Qty: 1
(B) Metal Cleat	Qty: 1
(C) Drywall Anchor	Qty: 3
(D) Screw	Qty: 3
(F) T-Screw Bracket	Qty: 1
(G) Long Dry Wall Anchor	Qty: 1
(H) T-Screws	Qty: 1



- Do not throw away packaging materials until assembly is complete.
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- This mirror can be mounted vertically only.

TO ASSEMBLE:

1. Position mirror in desired location on wall.
2. Position metal cleat (B) in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Remove metal cleat (B) from the wall.
4. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
5. Place metal cleat (B) over anchors and insert; then tighten all screws.
6. At bottom of wall, mark for T-Screw (H) accordingly and repeat step 4 for T-Screw wall anchor (G).
7. Hang mirror on T-Screw wall bracket (F), as shown in Figure 2.
8. Now, align Bottom T-Screw on wall with bracket and use wrench clockwise on T-Screw so that it locks mirror from moving forward.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS