

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DFC05

NAME: Vasili Flush Mount


MATERIAL TYPE: Steel/Seedy Gl; FINISH: Antique Brass/Clear

SOCKET TYPE: Integrated LED SOCKET QTY: 1

BULB WATTAGE: 13W LED

VOLTAGE: 110-120 V

ITEM NET WEIGHT: 12LBS

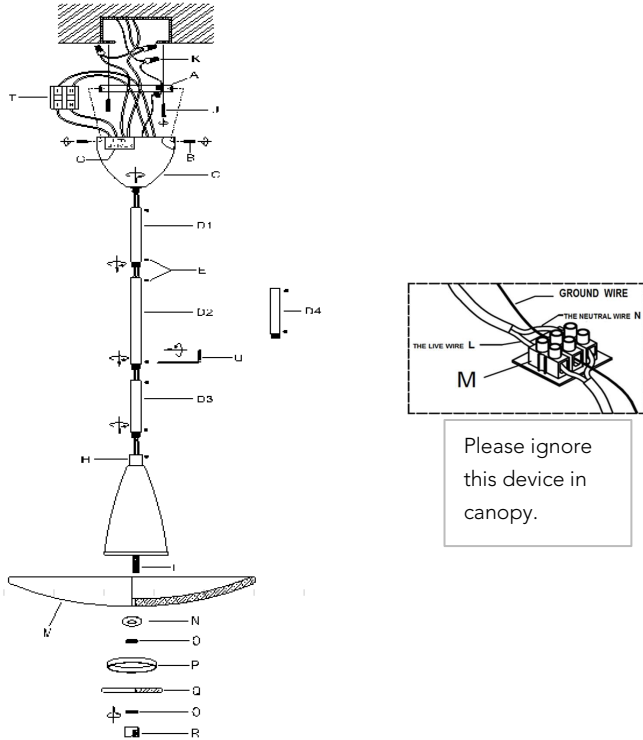

PARTS INCLUDED:

A Mounting Plate	Qty: 1	M Glass Shade	Qty: 1
B Canopy Screw	Qty: 2	N Plastic Washer	Qty: 1
C Canopy	Qty: 1	O Screw Nut	Qty: 2
D Rods	Qty: 4	P Metal Washer	Qty: 1
E Hex Screw	Qty: 9	Q Glass Plate	Qty: 1
H Lamp Body	Qty: 1	R Finial	Qty: 1
I Threaded Nipple	Qty: 1		

HARDWARE INCLUDED:

K Plastic Wire Connector 2 Pc	U Allen Wrench	1 Pc
J Mounting Screws	2 Pcs	

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Connect lamp body(h) and canopy(c) with rod (d1, d2, d3, d4), when you connect the rods, loosen the small hex screws (e) first then tighten with Allen wrench (u) after all rods are connected. Be sure all the set screws are tight enough. Note: if you want the fixture to be semi-flush mount, you must disconnect the lamp body wires from the 2-wire terminal(t) and connect lamp body(h) and canopy (c) with rod (d4). Then connect the lamp body wire and device wires by 2-wire terminal(t).
4. Pull the electrical cord of "j-box" through the exit hole of the mounting plate.
5. Pay attention that you do not need to connect the terminal block(f). It is used for the wire connection for euro-market. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
6. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
7. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
8. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
9. Gently tuck the wire connections(k) neatly into the ceiling junction box.
10. Attach the mounting plate (a) to the outlet box using the mounting screws(j) and tighten screws(j) with a screwdriver.
11. Attach the canopy(c) to the mounting plate(a) using the enclosed canopy screws(b). secure the canopy by tightening 2 canopy screws(b)
12. Attached the glass shade(m) & plastic washer (n) and screw nut(o) to the threaded nipple(i), then secure glass with screw nut(o) in a clockwise direction.
13. Attached the metal washer (p) & glass flake(q) and screw nut(o) to the threaded nipple(i), then secure glass with screw nut(o) in a clockwise direction. Attached the finial(r) to the threaded nipple(h) in a clockwise direction till tight.
14. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS