

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: DFC09 NAME: BRYN FLUSH MOUNT

MATERIAL TYPE: METAL/GLASS FINISH: ENGLISH BRONZE/
MATTE SWIRL GLASS

SOCKET TYPE: E26 SOCKET QTY: 1PC

BULB WATTAGE: 60W TYPE A

VOLTAGE: 120V ITEM NET WEIGHT: 9.9LBS

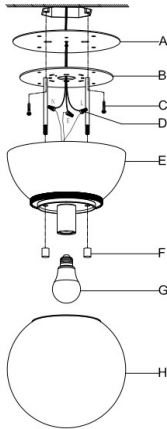

PARTS INCLUDED:

Mounting Plate(A)	Qty: 1
Mounting Plate(B)	Qty: 1
Mounting Screws(C)	Qty: 2
Wire Connector(D)	Qty: 3
Canopy (E)	Qty: 1
Finial(F)	Qty: 2
Bulb(G)	Qty: Not included
Glass shade(H)	Qty: 1

HARDWARE INCLUDED:

Mounting Screws	Qty: 2
Plastic Wire Connector	Qty: 3

TOOLS NEEDED (Not Included):

1 Screwdriver



These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
 2. Attach mounting plate(A and B) to ceiling or junction box using mounting screw(C).
 3. Connect ground wire from wall to ground wire from lamp using wire caps (D).
 4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps (D).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
5. Attach the canopy (E) to the mounting plate (B) and secure it with the two provided finials (F).
 6. Insert light bulb(G)(Not included). **DO NOT EXCEED SPECIFIED MAX WATTAGE.**
 7. Screw the glass shade (H) onto the canopy (E) clockwise until it is tight.
 8. Restore power to junction box and test fixture.

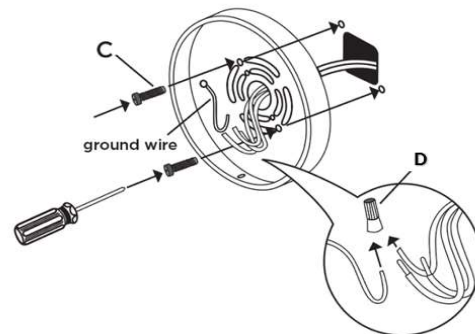

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150
Arteriors Home: 972-488-9800 Arteriors Contract: 972-488-9800 Ext. 321

ARTERIOS