


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DFC18	NAME: Malta Flush Mount
MATERIAL TYPE: Polyresin/iron. FINISH: Stonewash/English Bronze	
SOCKET TYPE: E12 Ceramic. SOCKET QTY: 3	
BULB WATTAGE: TYPE B 40W or /LED 9W	
VOLTAGE: 110V-120V ITEM NET WEIGHT: 26.4 LBS	

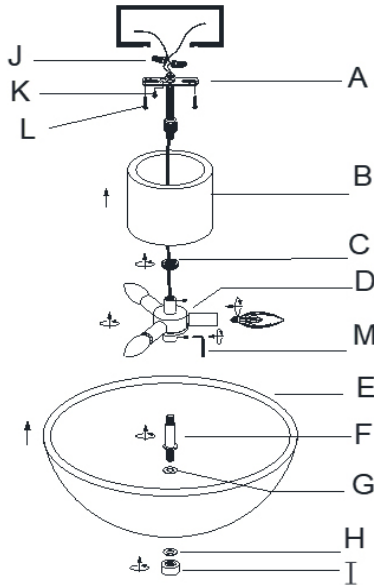

PARTS INCLUDED:

Mounting Plate(A):	Qty: 1PC
Canopy(B):	Qty: 1PC
Collar Loop(C)	Qty: 1PC
Socket Assembly(D):	Qty: 1PC
Shade(E):	Qty: 1PC
Pipe (F):	Qty: 1PC
Finial (I):	Qty: 1PC

HARDWARE INCLUDED:

Plastics Washer(G)	1	Green Ground Screw(K)	1
Plastics Washer(H)	1	Mounting Screws(L)	2
Plastic Wire Connector(J)	3	Allen Wrench(M)	1

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove Mounting Plate(A) from Canopy(B) by unscrewing the Collar loop(C).
5. Screw the Pipe(F) to the Socket Assembly(D) till tight. Also tighten the hexangular screw in the side desired hole by Allen wrench(P).
6. Attach Plastics Washer(G) to the end threading of Pipe , pass through the shade (E) , and attach Plastic washer(H), then screw Finial (H) to secure the Shade till tight.
7. Carefully inspect the pendant's fixture wires and pass wires through Mounting Plate(A).
Neutral fixture wire: White,
Hot fixture wire: Black,
Ground wire: Green
8. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire connector(J) and wrap the connection with electrical tape.
9. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire connector(J) and wrap the connection with electrical tape.
10. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire connector(J) and wrap the connection with electrical tape.
DO NOT REVERSE THE HOT AND NEUTRAL.
CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Gently tuck the wire connections neatly into the junction box.
12. Place the Mounting plate(A) over the center of the ceiling junction box.
13. Align holes in Mounting plate with holes in junction box and attach with two mounting bolts. Secure bolts with a Phillips head screwdriver.
14. Push Canopy up(B) over the mounting plate until it is flush with the ceiling.
15. Push Collar Loop(C) through hole in canopy and thread onto nipple on the mounting plate. Secure by turning collar clockwise until canopy is flush with the ceiling.
16. Connect pipe(F)to the Canopy (B)by using hexangular screw and Allen wrench.
17. Insert 3pcs TYPE B 40W bulbs (or suitable LED 9W bulbs, NOT INCLUDED) in the socket.
DO NOT EXCEED SPECIFIED WATTAGE .
18. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.