

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: DLC38 NAME: SMYTH ROUND CHANDELIER

MATERIAL TYPE: IRON FINISH: ANTIQUE BRASS

SOCKET TYPE: E12 SOCKET QTY: 9

BULB WATTAGE: 60W

VOLTAGE: 110-120V ITEM NET WEIGHT: 25.5lbs

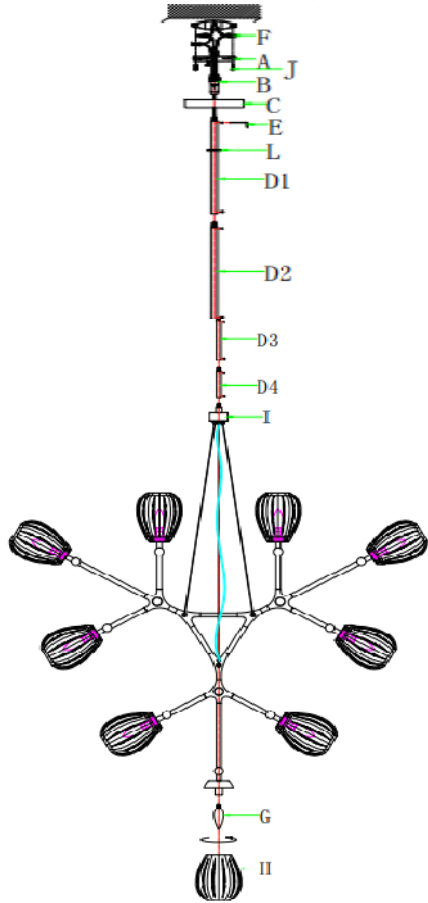

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1pc	Lamp Body (I)	Qty: 1pc
Swivel (B)	Qty: 1pc	Glass Shade(H)	Qty: 9pc
Canopy (C)	Qty: 1pc	Collar Loop(L)	Qty: 1pc
Rod (D1, D2, D3, D4)	Qty: 4pcs		

HARDWARE INCLUDED:

Mounting Screws(J)	Qty: 2 Pcs	Plastic Wire Connector (F)	Qty : 3 Pcs
Hexangular Screw (K)	Qty: 5 Pcs	Allen Wrench(E)	Qty : 1 Pc

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Connect lamp body(I) and canopy(C) with rods(D1,D2,D3,D4) when you connect the rods, loosen the small hex screws(K) first then tighten with allen wrench(E), after all rods are connected. Be sure all the hex screws are tight enough.
5. Remove mounting plate(A) from the canopy(C) by unscrewing the collar loop(L).
6. Carefully inspect the pendant's fixture wires. Neutral fixture wire: White; Hot fixture wire: Black ; Ground wire: Green
7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
8. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Attach the mounting plate(A)to the ceiling outlet box by using the enclosed mounting screw(J) and tighten screws with a screwdriver
12. Push collar loop(L) through hole in canopy and thread onto nipple on mounting plate(A). Secure by turning collar clockwise until canopy is flush with the ceiling.
13. Insert 9 type B 60W bulb(or CFL16W/LED 13W bulb,not included)into the sockets. **DO NOT EXCEED SPECIFIED WATTAGE.**
14. Attach the glass shade(H) on the socket,and tighten glass in a counter clockwise direction.
15. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.