

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: DMC26 NAME: Middlebury Pendant

MATERIAL TYPE: Steel/Leather. FINISH: HB/Graphite

SOCKET TYPE: E12 Ceramic. SOCKET QTY: 6

BULB WATTAGE: TYPE G 60W or/LED 13W

VOLTAGE: 110V-120V ITEM NET WEIGHT: 12.1 LBS

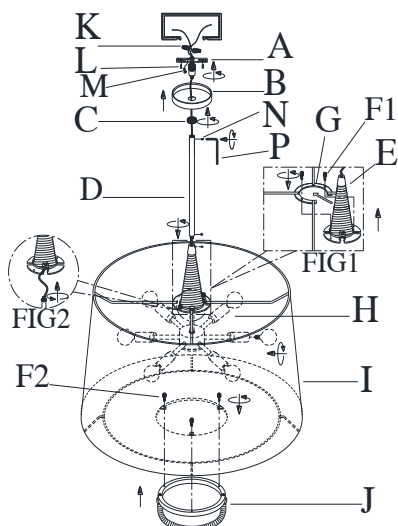

PARTS INCLUDED:

Mounting Plate(A):	Qty: 1PC
Canopy(B):	Qty: 1PC
Collar Loop(C)	Qty: 1PC
Rods(D):	Qty:1 SET(12"*2pcs;6"*1pc;4"*1pc)
Taper Column(E):	Qty: 1PC
Set Screw(F):	Qty: 5PCS
Shade C Spider(G):	Qty: 1PC
Socket Assembly(H):	Qty: 1PC
Shade(I):	Qty: 1PC
Finial (J):	Qty: 1PC

HARDWARE INCLUDED:

Mounting Screws(L)	2	Allen Wrench(P)	1
Plastic Wire Connector(K)	3	Hexangular Screw(N)	9
Green Ground Screw(M)	1		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove Mounting Plate(A) from the Canopy(B) by unscrewing the Collar Loop(C).
5. Screw the Rod(D) on the Taper Column(E) till tight. Tighten the hexangular screw(N) in the side desired hole by allen wrench(P) **(NOTE: Total 4pcs rods, the suspension height can be adjusted by quantity of rods).**
6. As Fig1, attach Shade C Spider(G) cover bottom plate of Column(E) properly, Align the holes and fix together by using Set Screws(F1)
7. As Fig2, screw the Socket Assembly(H) onto the bottom column.
8. Connect the Finial(J) to the bottom rim of Shade(I) by using 3pcs Set Screws(F2) till secure.
9. Carefully inspect the pendant's fixture wires.
Neutral fixture wire: White,
Hot fixture wire: Black,
Ground wire: Green
10. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire connector(K) and wrap the connection with electrical tape.
11. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire connector(K) and wrap the connection with electrical tape.
12. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire connector(K) and wrap the connection with electrical tape.
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. Gently tuck the wire connections neatly into the junction box.
14. Place the Mounting Plate(A) over the center of the junction box.
15. Align holes in mounting plate with holes in junction box and attach with two Mounting Screws(L). Secure screws with a Phillips head screwdriver.
16. Push Canopy(B) up over the mounting plate until it is flush with the ceiling.
17. Push Collar Loop(C) through hole in canopy and thread onto nipple on the mounting plate. Secure by turning collar clockwise until canopy is flush with the ceiling.
18. Insert 6pcs TYPE G 60W bulbs (or suitable LED 13W bulbs, NOT INCLUDED) in the socket.
DO NOT EXCEED SPECIFIED WATTAGE.
19. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS