


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

| | |
|-----------------------------------|------------------------|
| ITEM NO.: DMS06 | NAME: Trai Pendant |
| MATERIAL TYPE: Rattan Peel | FINISH: Black |
| SOCKET TYPE: E26 | SOCKET QTY: 1, 3" Neck |
| BULB WATTAGE: 60W/CFL 16W/LED 13W | |
| VOLTAGE: 110-120 V | ITEM NET WEIGHT: 13LBS |

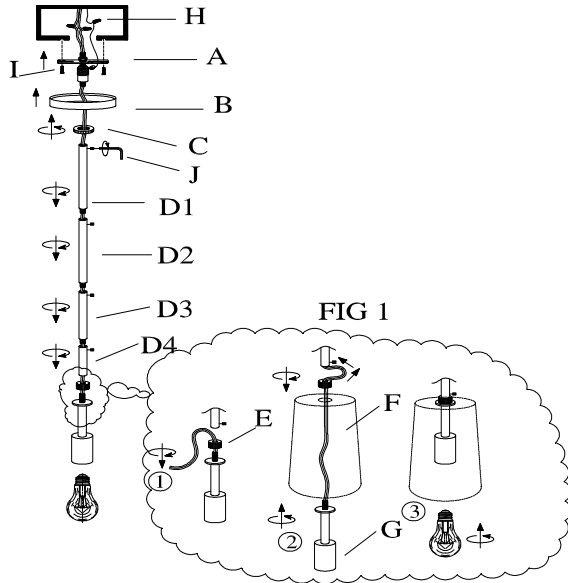

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. As shown in fig, unscrew the locking ring(e) off the socket assembly(g), and attach the shade(f, not included) from the bottom to the socket properly, then secure it by screw the locking ring(e) till tight.
4. Gently pull wiring down from ceiling junction box and allow to hang.
5. Remove mounting plate from the canopy by unscrewing the collar.
6. Carefully inspect the pendant's fixture wires. Neutral fixture wire: White | Hot fixture wire: Black | Ground wire: Green
7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
8. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Place the mounting plate over the center of the ceiling junction box.
12. Align holes in mounting plate with holes in junction box and attach with two mounting bolts. Secure bolts with a Phillips head screwdriver.
13. Push canopy up over the mounting plate until it is flush with the ceiling.
14. Push collar through hole in canopy and thread onto nipple on the mounting plate. Secure by turning collar clockwise until canopy is flush with the ceiling.
15. Restore power to junction box and test fixture. Insert 60W bulb into fixture. **DO NOT EXCEED SPECIFIED WATTAGE OF PENDANT.**

PARTS INCLUDED:

| | | | |
|------------------|--------|----------------|--------|
| A MOUNTING PLATE | Qty: 1 | E LOCKING RING | Qty: 1 |
| B CANOPY | Qty: 1 | F SHADE | Qty: 1 |
| C COLLAR LOOP | Qty: 1 | G SOCKET ASSEM | Qty: 1 |
| D RODS | Qty: 4 | | |

HARDWARE INCLUDED:

| | | | |
|--------------------------|-------|---------------|-------|
| H Plastic Wire Connector | 2 Pcs | Canopy Screws | 2 Pcs |
| Mounting Screws | 2 Pc | | |
| Green Ground Screw | 1 Pc | Allen Wrench | 1 Pc |

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOS