

# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:


ITEM NO: DPC01      NAME: Tarlow Pendant

MATERIAL TYPE: Steel      FINISH: Pine

SOCKET TYPE: E26      SOCKET QTY: 1

BULB WATTAGE: 60W/CFL 16W/LED 13W

VOLTAGE: 110-120V      ITEM NET WEIGHT: 10LBS

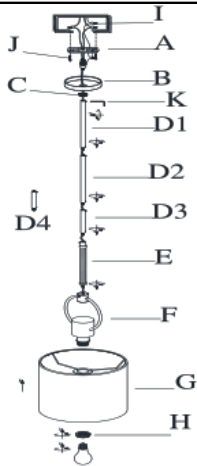

## PARTS INCLUDED:

Mounting Plate (A)	Qty: 1
Canopy (B)	Qty: 1
Pipe (D)	Qty: 4
Body	Qty: 1
Socket (F)	Qty: 1
Shade (G)	Qty: 1
Socket Ring (H)	Qty: 1

## HARDWARE INCLUDED:

Mounting Screws (K)	Anchor (M)
Wire Connector (J)	Screw (N)
Allen Wrench (L)	

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



## TO ASSEMBLE:

- 1.REMOVE ALL PACKING CONTENTS FROM THE CARTON(S) CAREFULLY.
- 2.REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY.
- 3.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 4.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 5.REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY TURNING COLLAR LOOP(C ) IN A COUNTER CLOCKWISE DIRECTION.
- 6.SCREW THE PIPE(E) ON THE SOCKET ASSEMBLY (F) TILL TIGHT .
- 7.THREAD THE ROD(D3) TO THE PIPE(E), AND TIGHTEN THE HEXANGULAR SCREW IN THE SIDE DESIRE HOLE BY ALLEN WRENCH(K). REPEAT THE SAME OPERATION ON THE ROD (D1)AND (D2), IF THE CEILING IS HIGH ENOUGH , PLS ASSEMBLE THE ROD(D4)IF NEED.
- 8.UNSCREW THE SOCKET RING(H)OFF THE SOCKET. ATTACH THE SHADE(G) TO THE SOCKET AND SECURE WITH SOCKET RING(H) TILL TIGHT.
- 9.CAREFULLY INSPECT THE PENDANT'S FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE SILVER WIRE IS THE GROUNDED WIRE.
- 10.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN) OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 11.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 12.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. GENTLY TRUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 14.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
15. PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
- 16.SCREW ROD (D1) TO THE CANOPY (B)BY USING HEXANGULAR SCREW AND ALLEN WRENCH(K) BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
- 17.INSERT ONE TYPE A 60W BULB(OR SUITABLE CFL 16W/LED 13W BULBS,NOT INCLUDED) IN THE SOCKET.  
DO NOT EXCEED SPECIFIED WATTAGE.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.