
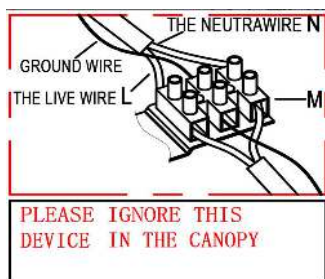


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DPC08	NAME: Aleena Pendant
MATERIAL TYPE: Steel	FINISH: Antique Brass
SOCKET TYPE: Integrated LED	SOCKET QTY: 3
BULB WATTAGE: 125W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 9.5LBS

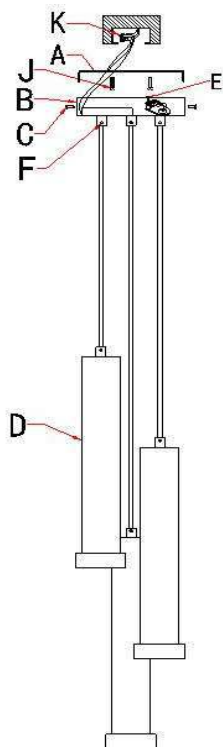

PARTS INCLUDED:

Mounting Plate(A)	Qty:1PC	Lamp Body (D)	Qty:1PC
Canopy(B)	Qty:1PC	Screw €	Qty:3PCS
Canopy Screw(C)	Qty:2PCS	Plastic Set Screw(F)	Qty:3PCS

HARDWARE INCLUDED:

(J) Mounting Screws	(S) Allen Wrench
(K) Plastic Wire Connector	Green Ground Screw

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate from the canopy by unscrewing the collar.
5. Loosen the screws (E) and plastic set screw (F) with a screwdriver. Adjust the desired length of the wire, and then tighten the screws (E) and plastic set screw (F) using the screwdriver.
6. Pull the electrical cord of "j box" through the exit hole of the mounting plate(A).
7. PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE WIRE CONNECT DEVICE(M). IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.
8. Carefully inspect the pendant's fixture wires. Neutral fixture wire: White Hot fixture wire: Black Ground wire: Bare wire
9. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
10. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
11. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). / Fasten each together with a wire nut and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. Gently tuck the wire connections(K) neatly into the ceiling junction box.
13. Place the mounting plate(A) over the center of the ceiling junction box.
14. Align holes in mounting plate(A) with holes in junction box and attach with two mounting bolts(J). Secure bolts with a Phillips head screwdriver.
15. Attached canopy over the mounting plate(A) until it is flush with the ceiling. Secure by screwing the Canopy Screws(C) clockwise until canopy is flush with the ceiling.
16. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS