


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.:DPC19	NAME:KATHLEEN PENDANT
MATERIAL TYPE: METAL	FINISH: ANTIQUE BRASS
SOCKET TYPE: E26	SOCKET QTY: 1
BULB WATTAGE: 60W /CFL 13W /LED 8W	
VOLTAGE: 110V-120V	ITEM NET WEIGHT: 10.LBS

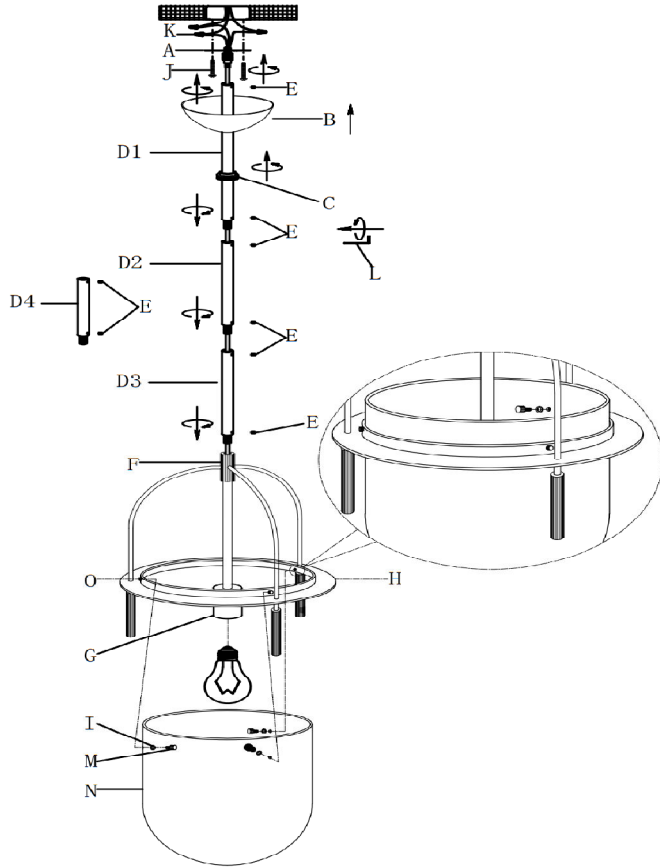

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1Pc	Socket (G)	Qty: 1Pc
Canopy (B)	Qty: 1Pc	Metal Ring (H)	Qty: 1Pc
Collar Ring (C)	Qty: 1Pc	Rubber Washer (I)	Qty: 3Pcs
Rod (D)	Qty: 4Pcs	Thumb Screw (M)	Qty: 3Pcs
Hex Screw (E)	Qty: 8Pcs	Glass Shade (N)	Qty: 1Pc
Lamp Assembly (F)	Qty: 1Pc	Screw Nut (O)	Qty: 3Pcs

HARDWARE INCLUDED:

Mounting Screws (J)	Qty : 2Pcs	Canopy Screws	
Plastic Wire Connector (K) Qty : 3Pcs		Allen Wrench (L)	Qty : 1Pc
Green Ground Screw	Qty : 1Pc		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate(A) from the canopy by unscrewing the collar.
5. Connect the lamp assembly(F) and canopy(B) with rod(D1,D2,D3,D4), when you connect the rods,loosen the small hex screws(E) first then tighten with allen wrench(L) after all rods are connected. be sure all the hex screws(E) are tight enough.
6. Carefully inspect the chandelier's fixture wires.**Neutral fixture wire: White Hot fixture wire: Black Ground wire: Green**
7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire connector(K) and wrap the connection with electrical tape.
8. Attach the neutral fixture wire from the chandelier to the neutral junctionbox wire (usually white). Fasten each together with a wire connector(K) and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the chandelier to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape.DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Place the mounting plate(A) over the center of the ceiling junction box.
12. Align holes in mounting plate(A) with holes in junction box and attach with two mounting bolts. Secure bolts with a Phillips head screwdriver.
13. Push canopy (B) up over the mounting plate(A) until it is flush with the ceiling.
14. Push collar ring (C) through hole in canopy(B) and thread onto nipple on the mounting plate(A). Secure by turning collar ring (C) clockwise until canopy(B) is flush with the ceiling.
15. Insert 1 TYPE-A 60W /13W CFL/8W LED bulb (not included) into socket(G). DO NOT EXCEED SPECIFIED WATTAGE OF PENDANT.
16. Put the glass shade (N) into the metal ring (H) and align holes with holes in screw nut (O),then attach thumb screw (M) with rubber washers (I) in a clockwise direction carefully to secure glass shade(N) .
17. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIOS