

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DRC03

NAME: Tenzin Pendant

MATERIAL TYPE: Iron, Alabaster



FINISH: English Bronze/White

SOCKET TYPE: Integrated LED SOCKET QTY: 6

BULB WATTAGE: 30W LED/2700K

VOLTAGE: 110-120 V

ITEM NET WEIGHT: 14LBS

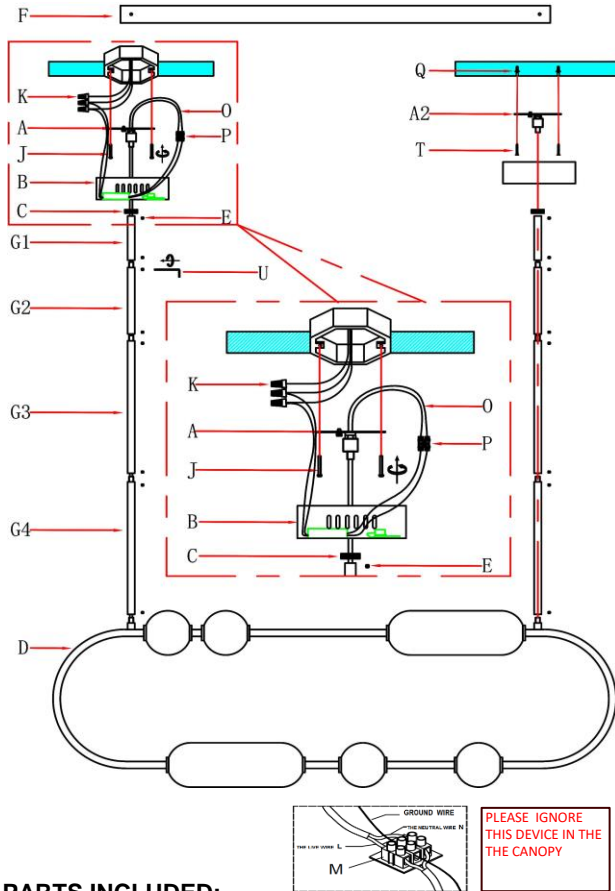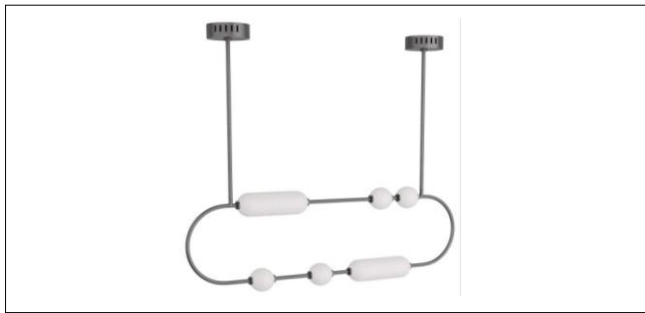

PARTS INCLUDED:

A MOUNTING PLATE	2 PCS	E HEX SCREW	4 PCS
B CANOPY WITH DRIVE	1 PC	F POSITIONING PLAT	1 PC
B1 CANOPY WITHOUT I	1 PC	G1,G2,G3,G4 ROD	8 PCS
C COLLAR LOOP	2 PCS	P 2-WIRE TERMINAL	1 PC
D LAMP BODY	1 PC	O POWER WIRE	1 PC

HARDWARE INCLUDED:

J Mounting Screws	S Allen Wrench
K Plastic Wire Connector	Green Ground Screw

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Position one of the holes on the positioning plate (f) on the center point of "j box", and then position another hole on the other end of the positioning plate (f) in desired location on ceiling. Mark one spot on the ceiling with a pencil. Then position the center point of the mounting plate (a) on the marked spot and mark two spots on the ceiling with a pencil to drill holes as per the holes on the mounting plate(a), insert the plastic anchors (q) into drilled holes for fastening the mounting plate(a).
4. Pass the power wire(o) through the rod (g4), (g3), (g2) &(g1), screw the rod(g4) to lamp body(d) till tight, repeat operation on the rod(g3), (g2) and rod(g1). Then screw the rod(g4), (g3), (g2) &(g1) to the other side of the lamp body(d) till tight. When you connect the rods, loosen the small hex screws(e) in the side hole first then tighten with Allen wrench(u) after all rods are connected. Be sure all the hexagonal screws are tight enough.
5. Put the collar loop(c) and canopy with driver(b) into the rod (g1) with power wire & turn, then pass the power wire(o) through the mounting plate(a), then screw the rod(g1) to the nipple of mounting plate(a) till tight. Put the collar loop and canopy without driver(b1) into other side of the rod (g1) and repeat. Then screw the rod(g1) to the nipple of mounting plate(a) till tight.
6. Pull the electrical cord of "j-box" through the exit hole of the mounting plate(a).
7. Please pay special attention that you do not need to connect the wire connect device(m). It is used for the wire connection for euro-market.
8. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare wire is the grounded wire.
9. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
10. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
11. Connect the hot fixture wire to the hot junction box wire. Fasten together with a plastic wire connector (k) and wrap the connection with electrical tape. Ensure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Connect the lamp power wires(o) together with 2-wire terminal(p). Connecting the black wire to the positive and the white wire to the negative of the 2-wire terminal (p). Gently tuck the wire connections(k) neatly into the junction box.
13. Attach the mounting plate (a) with nipple to the ceiling outlet box using the enclosed mounting screws (j) and tighten screws with a screwdriver.
14. Attach another mounting plate (a) with nipple to the ceiling outlet box using the enclosed strengthened screw(t) and tighten screws with a screwdriver.
15. Push the collar loop (c) in the canopy (b) and thread onto the nipple in mounting plate (a) by turning in a clockwise direction.
16. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOS