

# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:


ITEM NO.: DRC08 NAME: DILLON LINEAR CHANDELIER

MATERIAL TYPE: METAL+GLASS FINISH: CHATTERED EBN

SOCKET TYPE: E12 SOCKET QTY: 4

BULB WATTAGE:TYPE T 60W

VOLTAGE: 100V-120V ITEM NET WEIGHT: 15 LBS

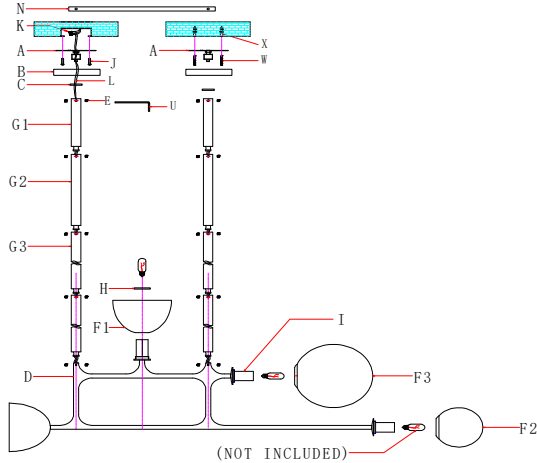

## PARTS INCLUDED:

|                    |           |                       |          |
|--------------------|-----------|-----------------------|----------|
| Mounting Plate (A) | Qty:2PCS  | Socket(I)             | Qty:4PCS |
| Canopy(B)          | Qty:2PCS  | Mounting Screw (J)    | Qty:4PCS |
| Collar (C)         | Qty:2PCS  | Wire connection(K)    | Qty:6PCS |
| Lamp Body(D)       | Qty:1PC   | Power Wire(L)         | Qty:1PC  |
| Hex Screw(E)       | Qty:24PCS | Allen Wrench(U)       | Qty:1PC  |
| Glass(F1)          | Qty:2PCS  | Rod(G1,G2,G3,G4)      | Qty:8PCS |
| Glass(F2)          | Qty:1PC   | Socket Ring(H)        | Qty:2PCS |
| Glass(F3)          | Qty:1PC   | Positioning Plate(N)  | Qty:1PC  |
| Anchor(X)          | Qty:2PCS  | Strengthened Screw(W) | Qty:2PCS |

## HARDWARE INCLUDED:

|                        |   |                  |    |
|------------------------|---|------------------|----|
| Mounting Screws        | 4 | Hexangular Screw | 24 |
| Plastic Wire Connector | 6 | Allen Wrench     | 1  |
| Green Ground Screw     | 1 |                  |    |

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver
- Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



## TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate(A) from the canopy(B) by unscrewing the collar(C).
5. Position one of the holes on the positioning plate (N) on the center point of "j box", and then position another hole on the other end of the positioning plate (N) in desired location on ceiling. Mark one spot on the ceiling with a pencil, then position the center point of the mounting. Position fixture in desired location on ceiling. The mounting plate features (2) holes for screw mounting.
6. Pass the power wire(L) through the rod (G4),(G3),(G2)&(G1), screw the rod(G4) to lamp body(D) till tight,repeat the same operation on the rod(G3),rod(G2) and rod(G1).When you connect the rods,loosen the small hex screws(E) in the side hole first then tighten with allen wrench(U) after all rods are connected.Be sure all the hexangular screws are tight enough.
7. Carefully inspect the chandelier's fixture wires.  
Neutral fixture wire: It has very fine ridges molded into its plastic covering.  
Hot fixture wire: It has a smooth covering  
Ground wire: Bare wire

8. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
9. Attach the neutral fixture wire from the chandelier to the neutral junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
10. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

11. Gently tuck the wire connections(K) neatly into the ceiling junction box.
12. Place the mounting plate(A) over the center of the ceiling junction box.
13. Align holes in mounting plate(A) with holes in junction box and attach with two mounting bolts(J) and two strengthened Screw(W). Secure bolts with a Phillips head screwdriver.
14. Push canopy(B) up over the mounting plate(A) until it is flush with the ceiling.
15. Push collar(C) through hole in canopy(B) and thread onto nipple on the mounting plate(A). Secure by turning collar(C) clockwise until canopy(B) is flush with the ceiling.
16. Insert 4 TYPE T60W bulbs (or /CFL 12W OR /LED 10W, not included) into socket(I).  
DO NOT EXCEED THE SPECIFIED WATTAGE.
17. Attach the glass shade (F2,F3) to the socket(I) by turning clockwise until tight.
18. Attach the glass shade (F1) to the socket (I) and secure by turning socket ring(H) clockwise till tight.
19. Restore power to the junction box and test fixture.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS