


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DRC09	NAME: ERICA CHANDELIER
MATERIAL TYPE: METAL+ LEATHER+ GLASS	FINISH: EBN+DOVE LEATHER+ OPAL GLASS
SOCKET TYPE: E12	SOCKET QTY: 8
BULB WATTAGE: TYPE T 60W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT: 23.5 LBS

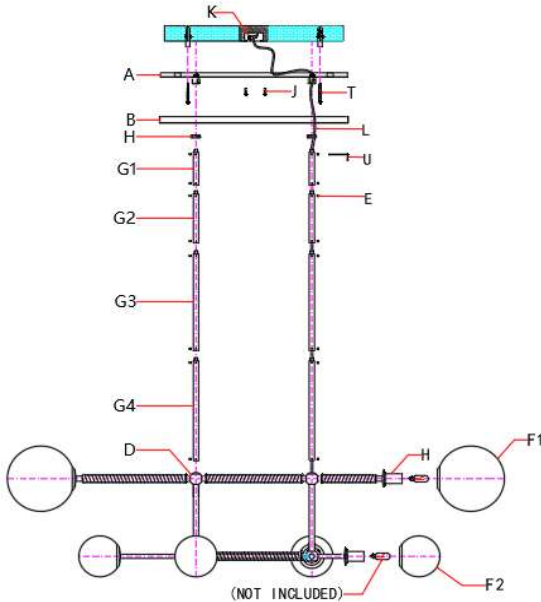

PARTS INCLUDED:

Mounting Plate (A)	Qty:1PC	Allen Wrench(U)	Qty:1PC
Canopy(B)	Qty:1PC		
Collar (C)	Qty:2PCS		
Lamp Body(D)	Qty:1PC		
Hex Screw(E)	Qty:24PCS		
Large Glass (F1)	Qty:2PCS		
Small Glass (F2)	Qty:6PCS		
Rod(G1,G2,G3,G4)	Qty:8PCS		
Socket(H)	Qty:8PCS		
Mounting Screw (J)	Qty:2PCS		
Wire connection(K)	Qty:1PC		
Power Wire(L)	Qty:1PC		

HARDWARE INCLUDED:

Mounting Screws	2	Hexangular Screw	24
Plastic Wire Connector	3	Allen Wrench	1
Green Ground Screw	1		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver
- Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate(A) from the canopy(B) by unscrewing the mounting screw(J).
5. Position fixture in desired location on ceiling. The mounting plate features (2) holes for screw mounting. Mark these spots on the ceiling with a pencil to drill holes. Drill 2 holes on these spots and insert anchors(Q) into drilled holes.
6. Pass the power wire(L) through the rod (G4),(G3),(G2)&(G1), screw the rod(G4) to lamp body(D) till tight,repeat the same operation on the rod(G3),rod(G2) and rod(G1).When you connect the rods,loosen the small hex screws(E) in the side hole first then tighten with allen wrench(U) after all rods are connected.Be sure all the hexangular screws are tight enough.
7. Carefully inspect the chandelier's fixture wires.
Neutral fixture wire: It has very fine ridges molded into its plastic covering.
Hot fixture wire: It has a smooth covering
Ground wire: Bare wire
8. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
9. Attach the neutral fixture wire from the chandelier to the neutral junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
10. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

11. Gently tuck the wire connections(K) neatly into the ceiling junction box.
12. Attach the key chain on the aircraft wire of the back plate to the mounting plate(A).
13. Place the mounting plate(A) over the center of the ceiling junction box.
14. Align holes in mounting plate(A) with holes in junction box and attach with two mounting bolts(J). Secure bolts with a Phillips head screwdriver. Then secure the mounting plate by inserting the strengthened screw(T) into the anchor(Q) and tightening clockwise with a screwdriver.
15. Attached canopy over the mounting plate(A) until it is flush with the ceiling. Secure by screwing the Collar(C) clockwise until canopy is flush with the ceiling.
16. Insert 8 TYPE T 60W bulbs (or /CFL 12W OR /LED 10W, not included) into socket(H).
DO NOT EXCEED THE SPECIFIED WATTAGE.
17. Attach the glass shade (F1,F2) to the socket(H) by turning clockwise until tight. Repeat the same operation on the other glass shade.
18. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS