


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DSC06	NAME: RENLY PENDANT
MATERIAL TYPE: METAL	FINISH: ENGLISH BRONZE
SOCKET TYPE: LED	SOCKET QTY: 1
BULB WATTAGE: 13W / 3000K / 90+CRI	
VOLTAGE: 100V-130V	ITEM NET WEIGHT: 31.2LBS

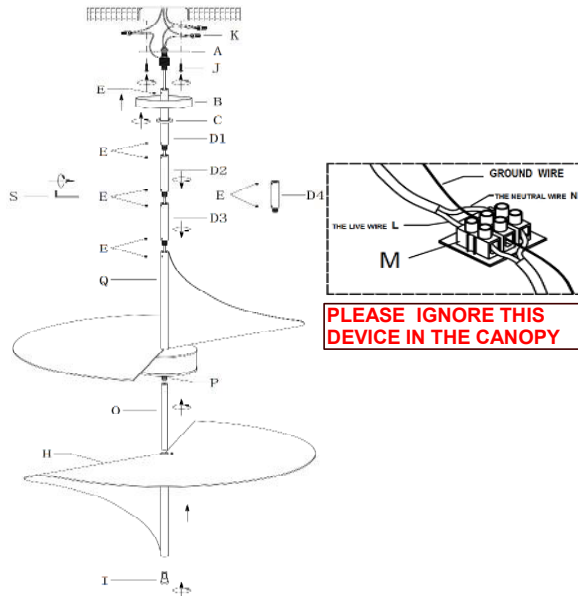

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Lamp body (Q)	Qty: 1 Pc
Canopy (B)	Qty: 1 Pc	Pipe (O)	Qty: 1 Pc
Collar Loop (C)	Qty: 1 Pc	Bottom metal part (H)	Qty: 1 Pc
Rod (D)	Qty: 4 Pcs	Finial (I)	Qty: 1 Pc
Hex Screw (E)	Qty: 9 Pcs	Threaded nipple (P)	Qty: 1 Pc

HARDWARE INCLUDED:

Mounting Screws (J)	Qty : 2 Pcs	Canopy Screws	
Plastic Wire Connector (K)	Qty : 3 Pcs	Allen Wrench (S)	Qty: 1 Pc
Green Ground Screw	Qty : 1 Pc		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate from the canopy by unscrewing the collar.
5. Connect the lamp body (Q) and Canopy (B) with rod (D1, D2, D3, D4), when you connect the rods, loosen the hex screws (E) first then tighten with allen wrench (S) after all rods are connected. Be sure all the hex screws (E) are tight enough. Then Connect Socket Assembly (O) with Lamp body (F) by turning Socket Assembly (O) clockwise until tight.
6. **Please pay special attention that you do not need to connect the terminal block (M) in the canopy. It is used for the wire connection for EURO-market.**
7. Carefully inspect the pendant's fixture wires.
Neutral fixture wire: White, Hot fixture wire: Black, Ground wire: Green
8. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
9. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut (K) and wrap the connection with electrical tape.
10. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut (K) and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
11. Gently tuck the wire connections neatly into the ceiling junction box.
12. Place the mounting plate (A) over the center of the ceiling junction box.
13. Align holes in mounting plate (A) with holes in junction box and attach with two mounting bolts. Secure bolts with a Phillips head screwdriver.
14. Push canopy (B) up over the mounting plate (A) until it is flush with the ceiling.
15. Push collar loop (C) through hole in canopy (B) and thread onto nipple on the mounting plate (A). Secure by turning collar loop (C) clockwise until canopy (B) is flush with the ceiling.
16. Attach the pipe (O) to the threaded nipple (P) in a clockwise direction. Then align the hole of center tube of the bottom metal part (H) and insert the pipe (O) until it is completely covered.
17. Attach the finial (I) into the bottom of the bottom metal part (H) and fix in a clockwise direction.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS