


## ASSEMBLY INSTRUCTIONS

**ITEM DESCRIPTION:**

ITEM NO. : DSC15	NAME: JAVIER MULTI PORT CHANDELIER
MATERIAL TYPE: IRON, CRYSTAL	FINISH: ANTIQUE BRASS, CHAMPAGNE
SOCKET TYPE: E12	SOCKET QTY: 9
BULB WATTAGE: LED BULB ONLY 8W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT: 64 LBS

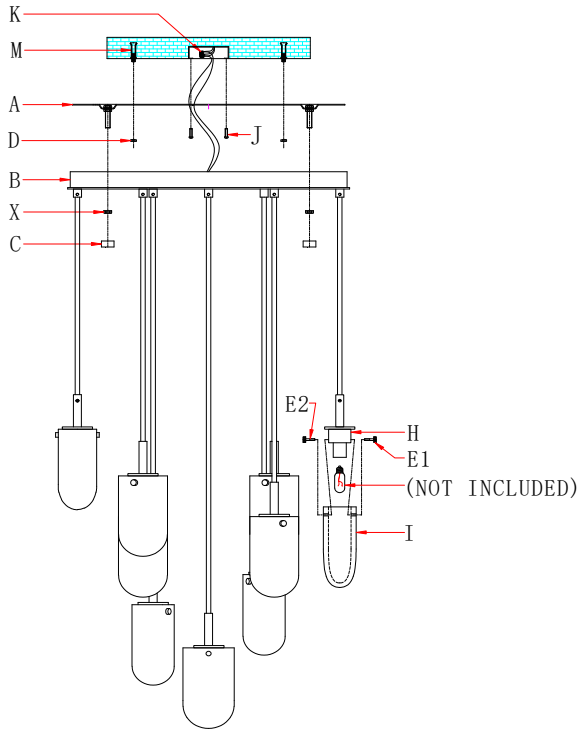

**PARTS INCLUDED:**

Mounting Plate (A)	Qty: 1PC	Expansion pipes (M)	Qty: 4PCS
Canopy (B)	Qty: 1PC	Crystal shade (I)	Qty: 9PCS
Final (C)	Qty: 4PCS	Nut (X)	Qty: 4PCS
Mounting nuts (D)	Qty: 4PCS	Socket (H)	Qty: 9PCS
Thumb screw (E2)	Qty: 9PCS		
Thumb screw (E1)	Qty: 9PCS		

**HARDWARE INCLUDED:**

Mounting Screws (J)	Qty: 2PCS
<b>Wire Cap (K)</b>	Qty: 3PCS
Green Ground Screw	Qty: 1PC

**TO INSTALL YOU WILL NEED:**

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



**TO ASSEMBLE:**

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
  2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
  3. Gently pull wiring down from ceiling junction box and allow to hang.
  4. Remove the mounting plate(A) from the canopy (B ) by loosening the nut(X) and the final(C).
  5. Using mounting plate (B) as a guide, line up with the ceiling and mark expansion pipes positions.
  6. Using a drill bit slightly smaller than the expansion pipes, drill holes in the marked positions. Install expansion pipes (M) into the holes using hammer.
  7. Line up mounting plate (B) to expansion pipes and add washers, lock washers and mounting nuts (D). Secure by tightening mounting nuts and two mounting screws (J).
  8. Pull the electrical cord of "J box "through the exit hole of the mounting plate(A).
  9. Carefully inspect the fixture wires.  
 Neutral fixture wire: Nickel  
 Hot fixture wire: It has a smooth covering  
 Ground wire: Bare wire
  10. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
  11. Attach the neutral fixture wire from the chandelier to the neutral junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
  12. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. Gently tuck the wire cap(K) neatly into the ceiling junction box.
  14. Attach the canopy (B) to the mounting plate (A) using the nut(X) and the final(C), and tighten them .
  15. Insert 9 LED 8W TYPE T bulbs ( not included) into the socket(H).
- DO NOT EXCEED SPECIFIED MAX WATTAGE.DO NOT EXCEED THE SPECIFIED WATTAGE.
16. Place the crystal shade (I) on the socket(H), then secure with the thumb screws (E1, E2) as shown.
  17. Restore power to junction box and test fixture.

**CARE INSTRUCTIONS:**

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS