


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DWCO2	NAME: Temira Sconce
MATERIAL TYPE: Ricestone Composite	FINISH: Ivory
SOCKET TYPE: E12	SOCKET QTY: 2
BULB WATTAGE: 60W/16W CFL/13W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 8LBS

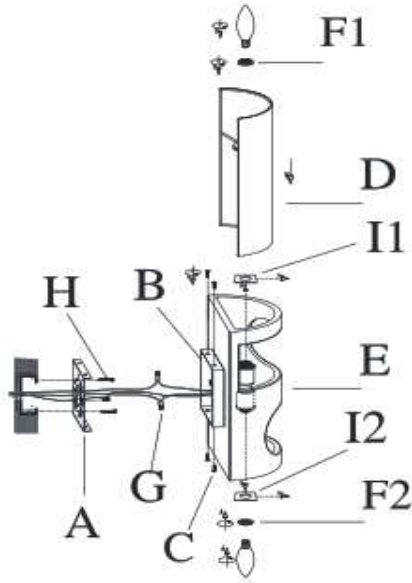

PARTS INCLUDED:

A Mounting Plate	Qty: 1	E Body	Qty: 1
B Back Plate	Qty: 1	F Socket Ring	Qty: 2
C Plate Screw	Qty: 4		
D Shade	Qty: 1		

HARDWARE INCLUDED:

G Plastic Wire Connector	2 Pcs	I Carton Washer	2 Pcs
H Mounting Screws	2 Pc		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY
2. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER
4. GENTLY PULL WIRING DOWN FROM CEILING JUNCTION BOX AND ALLOW IT TO HANG.
5. REMOVE THE BACK PLATE (B) FROM THE MOUNTING PLATE (A) BY LOOSE 4PCS PLATE SCREWS(C)
6. CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE SILVER WIRE IS THE GROUNDED WIRE.
7. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
9. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (G) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. UNSCREW SOCKET RING(F1) OFF SOCKET, TAKE OUT CARTON WASHER(I1) AND SHADE (D), THEN INSERT THE SHADE IN THE BODY(E) PROPERLY AND THEN SECURE IT WITH SOCKET RING(F) ON TOP SOCKET TILL TIGHT.
11. BE ENSURE TAKE OUT CARTON WASHER(I2) AS ABOVE STEP. CAUTION: IT IS VERY IMPORTANT THAT MOVE THE CARTON WASHERS BEFORE USING!
12. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
13. ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(G). TIGHTEN WITH A SCREWDRIVER.
14. ATTACH THE BACK PLATE(B) TO THE MOUNTING PLATE(A) USING PLATE SCREWS(C). TIGHTEN SCREW WITH A SCREWDRIVER.
15. INSERT 2 TYPE B 60W BULBS (OR SUITABLE CFL16W/LED 13W BULBS ,NOT INCLUDED) INTO THE SOCKET

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS