


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: DWCO8	NAME: Weston Sconce
MATERIAL TYPE: Glass, Steel	FINISH: Opal, Antique Brass, Bronze
SOCKET TYPE: E12	SOCKET QTY: 2
BULB WATTAGE: 40W/10W CFL/9W LED	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 6LBS

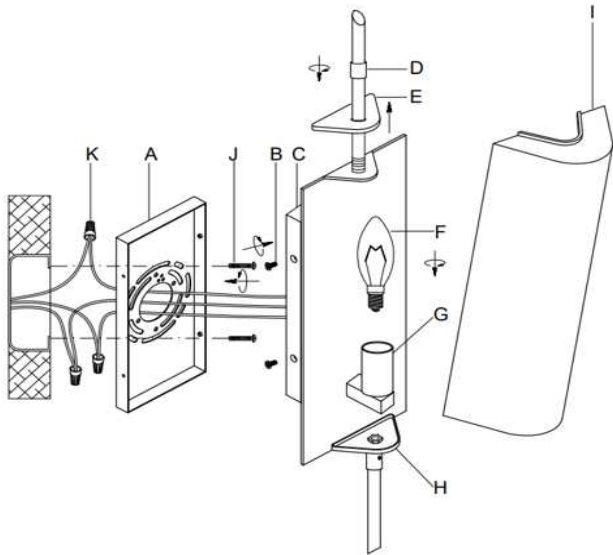

## PARTS INCLUDED:

A Mounting Plate	Qty: 1	F Bulb (Not Included)	Qty: 1
B Set Screw	Qty: 4	G Socket	Qty: 1
C Lamp Base	Qty: 2	H Metal Glass Cover	Qty: 1
D Threaded Post	Qty: 1	I Glass Shade	Qty: 1
E Metal Glass Cap	Qty: 1		

## HARDWARE INCLUDED:

J Mounting Screws	2 Pcs
K Plastic Wire Connector	2 Pc

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



## TO ASSEMBLE:

1. REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY
2. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
4. PULL THE ELECTRICAL CORD OF "J BOX" THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
5. CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE WIRE IS THE GROUNDING WIRE.
6. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
7. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
8. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
9. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE JUNCTION BOX.
10. ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX BY USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
11. ATTACH THE LAMP BASE(C) TO THE MOUNTING PLATE(A) BY USING THE ENCLOSED SET SCREWS(B) AND SECURE THE LAMP BASE(C) BY TIGHTENING 4 SET SCREWS(B) IN A CLOCKWISE DIRECTION.
12. INSERT 1 TYPE T 40W or /CFL 9W or /LED 4W BULB (NOT INCLUDED) INTO THE SOCKET(G). DO NOT EXCEED SPECIFIED WATTAGE.
13. WHEN YOU FIX THE GLASS SHADE, LOOSEN THE THREADED POST(D) FIRST IN A COUNTERCLOCKWISE DIRECTION
14. CAREFULLY PUT THE GLASS SHADE(I) ONTO THE LAMP BASE (C) AND BE SURE GLASS BOTTOM TO FIT THE METAL GLASS COVER (H) FIRST, THEN PLACE THE METAL GLASS CAP (E) TO COVER THE TOP OF THE GLASS SHADE(I), THEN GENTLY TIGHTEN THE THREADED POST (D) IN A CLOCKWISE DIRECTION TO SECURE THE GLASS SHADE.
15. RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIORES