


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.:DWC102	NAME: Emmett Sconce
MATERIAL TYPE: Iron, Glass	FINISH: Dark Vintage Silver, Oil rubbed bronze, Matte Swirl
SOCKET TYPE: E12	SOCKET QTY: 2
BULB WATTAGE: 60W /13W CFL/8W LED	
VOLTAGE: 110V-120V	ITEM NET WEIGHT: 3.53LBS

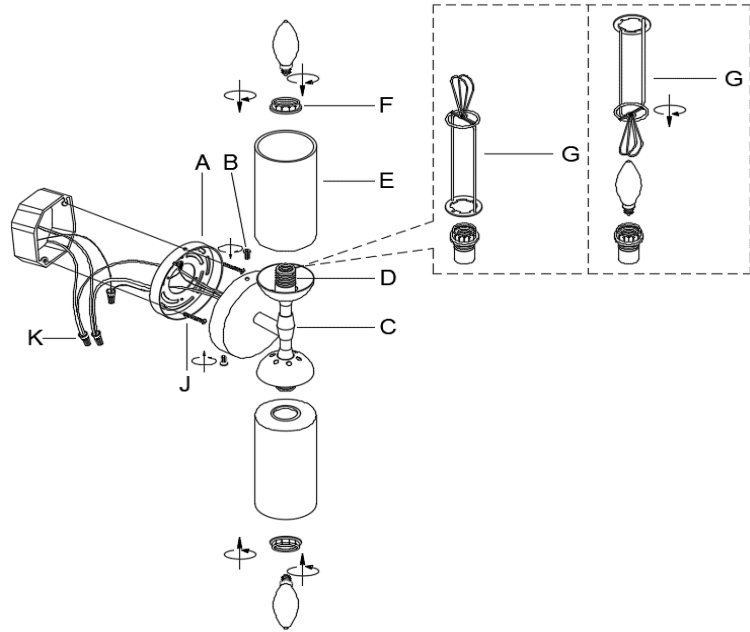

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Glass Shade (E)	Qty: 2 Pcs
Set Screws (B)	Qty: 2 Pcs	Socket Ring (F)	Qty: 2 Pcs
Lamp Body (C)	Qty: 1 Pc	Bulb Clamp (G)	Qty: 1 Pc
Sockets (D)	Qty: 2 Pcs		

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Connector (K)	Qty: 3 Pcs

TOOLS NEEDED (Not Included):



1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Please be sure you have all parts indicated before you begin assembly.
4. Gently pull the electrical cord from junction box, then pull the electrical cord from back plate through the exit hole of the mounting plate (A).
5. Remove the mounting plate (A) from the lamp body (C) by loose set screws (B).
6. Carefully inspect the pendant's fixture wires. Neutral fixture wire: white hot fixture wire: black ground wire: green
7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw.
8. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire connector (K) and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Attach the lamp body (C) to the mounting plate (A) by using the enclosed set screws (B). Tighten screws with screwdriver.
12. Put the glass shade (E) onto the socket (D) and then tighten the socket ring (F) by bulb clamp (G) to secure the glass shade (E).
13. Insert 2 type b 60w or/cfl 13w or/led 8w (not included) into the socket (D) by using bulb clamp (G). Do not exceed specified wattage.
14. Restore power to the junction box and test fixture.

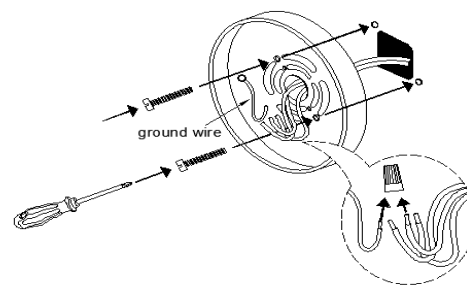

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150
Arteriors Home: 972-488-9800. Arteriors Contract: 972-488-9800 Ext. 321

ARTERIOS