

# ASSEMBLY INSTRUCTIONS


## ITEM DESCRIPTION:

|                             |                         |
|-----------------------------|-------------------------|
| ITEM NO.: DWCI3             | NAME: Velasco Sconce    |
| MATERIAL TYPE: Alabaster    | FINISH: White Alabaster |
| SOCKET TYPE: INTEGRATED LED | SOCKET QTY: 1           |
| BULB WATTAGE: 6W LED        |                         |
| VOLTAGE: 110-120 V          | ITEM NET WEIGHT: 13LBS  |



## TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully.
2. Please be sure you have all parts indicated before you begin assembly.
3. Shut off the main electrical supply from the main fuse box/circuit breaker.
4. Pull the electrical cord of "j box" through the exit hole of the mounting plate (A).
5. Position fixture in desired location on wall. the mounting plate (A) features (2) holes for screw mounting. Mark these spots on the wall with a pencil to drill holes. Drill 2 holes on these spots and insert anchors (C) into drilled holes.
6. Attach the mounting plate (A) to the outlet box by using the enclosed mounting screw (J) and tighten it with a screwdriver. Then fix the top and bottom of the mounting plate (A) by inserting 2 pcs of strengthened screws (E) into the anchor (C) and tighten strengthened screws (E) with a screwdriver.
7. Attach the key chain on the aircraft wire of the back plate to the mounting plate (A).
8. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. the bare wire is the grounded wire.
9. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
10. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (K) and wrap the connection with electrical tape. Be sure no strands are exposed.
11. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Please pay special attention that you do not need to connect the wire connect device (M). It is used for the wire connection for euro-market.
13. Gently tuck the wire connections neatly into the junction box.
14. Attach the back plate (B) onto the mounting plate (A) with 2 pcs of set screws (D) and tighten it with a screwdriver.

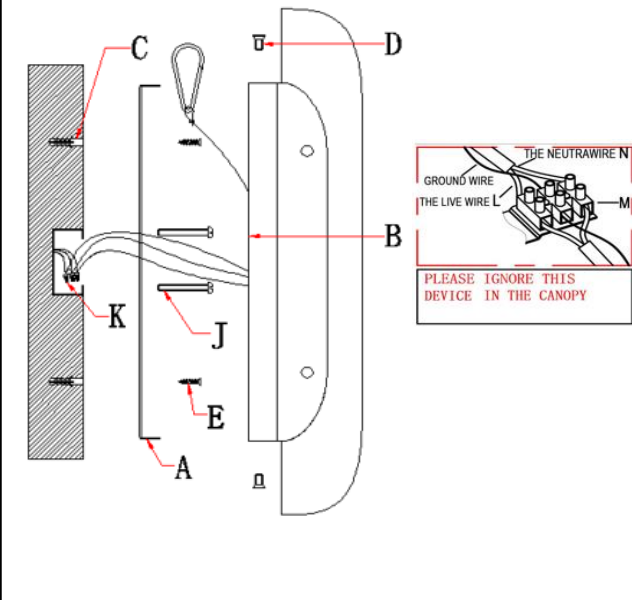

## PARTS INCLUDED:

|                    |        |
|--------------------|--------|
| (A) Mounting Plate | Qty: 1 |
| (B) Back Plate     | Qty: 1 |
| (D) Set Screw      | Qty: 2 |
| (F) Alabster       | Qty: 1 |

## HARDWARE INCLUDED:

|                            |      |                         |      |
|----------------------------|------|-------------------------|------|
| (J) Mounting Screw         | 2 Pc | (C) Anchor              | 2 Pc |
| (K) Plastic Wire Connector | 2 Pc | (E) Strengthening Screw | 2 Pc |

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver
- Electrical Tape

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS