


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

|                                   |                            |
|-----------------------------------|----------------------------|
| ITEM NO.: DWC22                   | NAME: Beverly Sconce, Left |
| MATERIAL TYPE: Brass              | FINISH: Antique Brass      |
| SOCKET TYPE: E12                  | SOCKET QTY: 2              |
| BULB WATTAGE: 60W/16W CFL/13W LED |                            |
| VOLTAGE: 110-120V                 | ITEM NET WEIGHT: 6.3 LBS   |

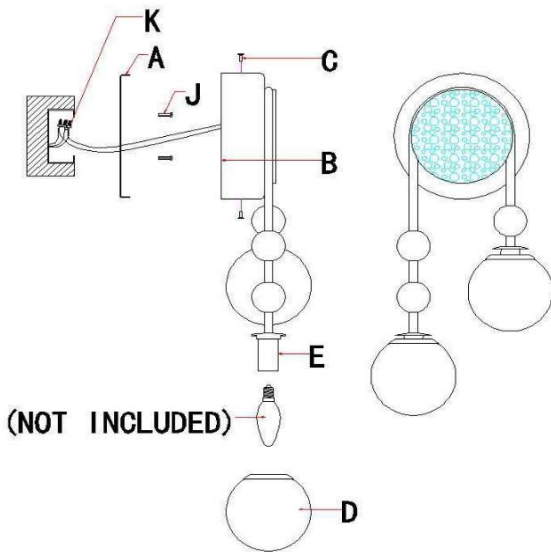

## PARTS INCLUDED:

|                      |        |                   |        |
|----------------------|--------|-------------------|--------|
| Mounting Plate ( A ) | Qty: 1 | Glass Shade(D)    | Qty: 2 |
| Back Plate(B)        | Qty: 1 | Socket (E)        | Qty: 2 |
| Canopy Screw (C)     | Qty: 2 | Mounting Screw(J) | Qty: 2 |

## HARDWARE INCLUDED:

|                              |
|------------------------------|
| Mounting Screws ( J )        |
| Plastic Wire Connector ( K ) |

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



## TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach the mounting plate (A) to wall or junction box using mounting screws(J), and tighten it with a screwdriver.
3. Connect ground wire from wall to ground wire from lamp using wire caps (A).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
5. Gently tuck the wire connections neatly into the junction box.
6. Attach front face of light to back plate by inserting Canopy screws (C) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
7. Insert 2 type T 60W bulb (or/cfl 12w or/led 10w, not included) into the socket. DO NOT EXCEED SPECIFIED MAX WATTAGE.
8. Twist the glass shade (D) clockwise onto the socket (E) until it is securely fastened.
9. Restore power to junction box and test fixture.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS