


## ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

|                                    |                               |
|------------------------------------|-------------------------------|
| ITEM NO.: DWC43                    | NAME: CRAWFORD OUTDOOR SCONCE |
| MATERIAL TYPE: METAL               | FINISH: AGED IRON             |
| SOCKET TYPE:E26                    | SOCKET QTY:1                  |
| BULB WATTAGE: 60W /13W CFL /8W LED |                               |
| VOLTAGE:110V-120V                  | ITEM NET WEIGHT:6.2LBS        |

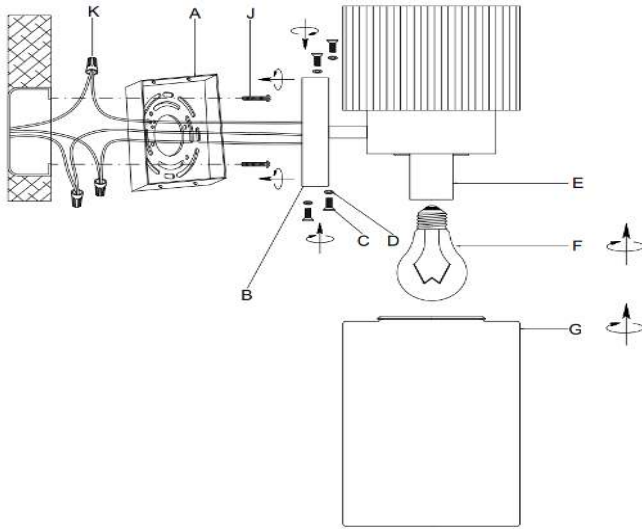

### PARTS INCLUDED:

|                      |          |                   |           |
|----------------------|----------|-------------------|-----------|
| Mounting Plate (A)   | Qty:1Pc  | Rubber Washer (D) | Qty: 4Pcs |
| Back Plate (B)       | Qty:1Pc  | Lamp Assembly (E) | Qty: 1Pc  |
| Back Plate Screw (C) | Qty:4Pcs | Glass Shade (G)   | Qty: 1Pc  |

### HARDWARE INCLUDED:

|                      |           |
|----------------------|-----------|
| Mounting Screws (J)  | Qty: 2Pcs |
| Plastic Wire Cap (K) | Qty: 3Pcs |

### TOOLS NEEDED (Not Included):

1 Screwdriver



These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



### TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Attach mounting plate(A) to wall or junction box by using the mounting screws (J).
4. Connect ground wire from wall to ground wire from lamp by using wire caps (K).
5. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
6. Attach Back Plate (B) to Mounting Plate (A) by using the enclosed Back Plate Screw(C) and Rubber Washer(D) .Tighten screws with screwdriver.Please be sure the rubber washer(D) is on top threading of the plate screws(C).
7. Put and assemble the glass shade(G) by rotating in a clockwise direction with The Lamp Assembly (E)
8. Use the outdoor silicone caulking compound to caulk completely along the rim of back plate(B) where it meets the wall surface,but leaving a space without the caulking compound at the bottom of back plate to allow the water to seep out if water entered into the J-Box by accident.See more details on extra page .
9. Insert 1 TYPE-A 60W /13W CFL /8W LED bulb(not included) into the Socket Assembly (E).DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE
10. Restore power to junction box and test

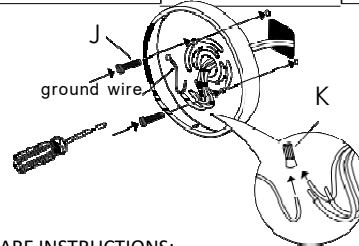


### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS

For customer service questions call 1-800-338-2150

## CAULKING INSTRUCTIONS

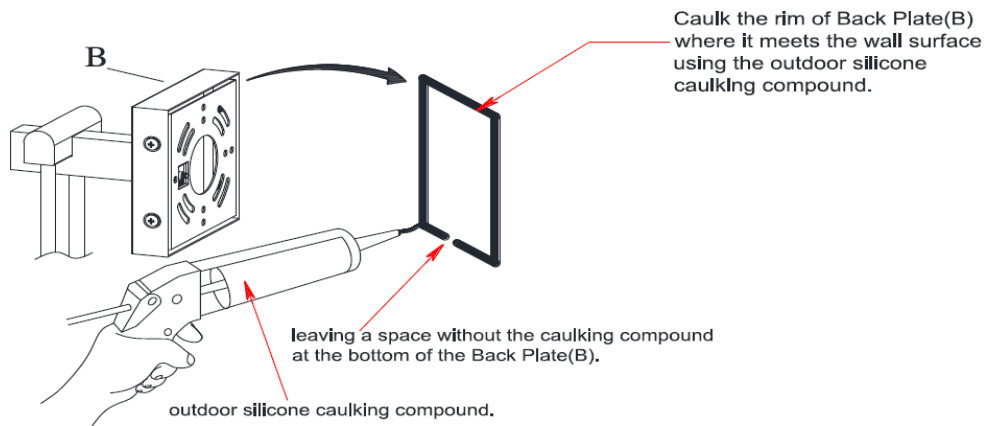

To prevent the water from entering the J-box and causing a short circuit, use the outdoor silicone caulking compound to caulk completely along the rim of Back Plate (B) where it meets the wall surface, but leaving a space without the caulking compound at the bottom of Back Plate (B).

**NOTE:** Mounting surface should be clean, dry, flat, and a 1/4 inch larger than the Back Plate (B) on all sides.

\*\*\*\*\*