


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DW53	NAME: FLUME SCONCE
MATERIAL TYPE: METAL,CRYSTAL	FINISH: ENGLISH BRONZE,SMOKE
SOCKET TYPE:E12	SOCKET QTY: 2
BULB WATTAGE: 40W or /CFL 9W or /LED 4W	
VOLTAGE:110V-120V	ITEM NET WEIGHT: 7.6LBS

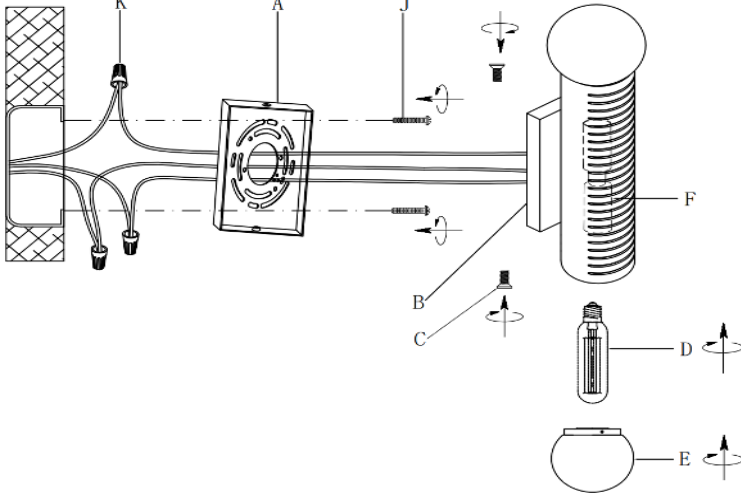

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Crystal (E)	Qty: 2 Pcs
Lamp Assembly (B)	Qty: 1 Pc	Socket (F)	Qty: 2 Pcs
Canopy Screw (C)	Qty: 2Pcs		

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.


We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
5. Attach lamp assembly (B) to mounting plate (A) by inserting canopy screws (C) through predrilled holes.Then tighten by using screwdriver.
6. Insert 2 TYPE-T 40W or/CFL 9W or /LED 4W bulb(not included) into socket(F). DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.
7. Put and assemble the crystal (E) by rotating in a clockwise direction with lamp assembly (B) .
8. Restore power to junction box and test fixture.

K	C	J
wire cap 3x	canopy screw 2x	mounting screw 2x

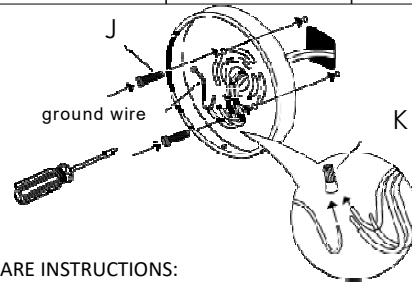

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of

For customer service questions call 1-800-338-2150

ARTERIO RS