

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: DWC55 NAME: HUNTINGTON SCONCE

MATERIAL TYPE: METAL FINISH: ENGLISH BRONZE

SOCKET TYPE: E12 SOCKET QTY: 4

BULB WATTAGE: 40W or /CFL 9W or /LED 4W

VOLTAGE: 110V-120V ITEM NET WEIGHT: 7.5LBS

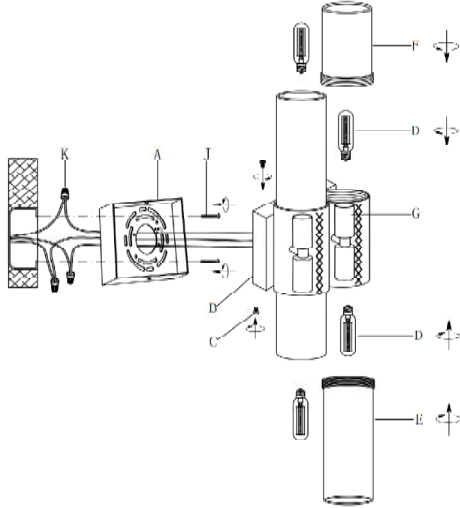

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Glass Tube (E)	Qty: 2 Pcs
Lamp Assembly (B)	Qty: 1 Pc	Metal Tube (F)	Qty: 2 Pcs
Canopy Screw (C)	Qty: 2 Pcs	Socket Assembly (G)	Qty: 4 Pcs

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Remove the metal tube (F) from the lamp assembly (B) by rotating in a counter-clockwise direction.
3. Attach mounting plate (A) to wall or junction box using mounting screws (J).
4. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
5. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps (K). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
6. Attach lamp assembly (B) to mounting plate (A) by inserting canopy screws (C) through predrilled holes. Then tighten by using screwdriver.
7. Insert 4 TYPE-T 40W or /CFL 9W or /LED 4W bulb (not included) into socket (G). **DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.**
8. Put and assemble the metal tube (F) and glass tube (E) by rotating in a clockwise direction with socket assembly (G).
9. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of

For customer service questions call 1-800-338-2150

ARTERIOS