

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DWC59

NAME: FAIRFAX SCONCE

MATERIAL TYPE: METAL

FINISH: ENGLISH BRONZE


SOCKET TYPE: E12

SOCKET QTY: 2

BULB WATTAGE: LED 8W

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 10.91 LBS

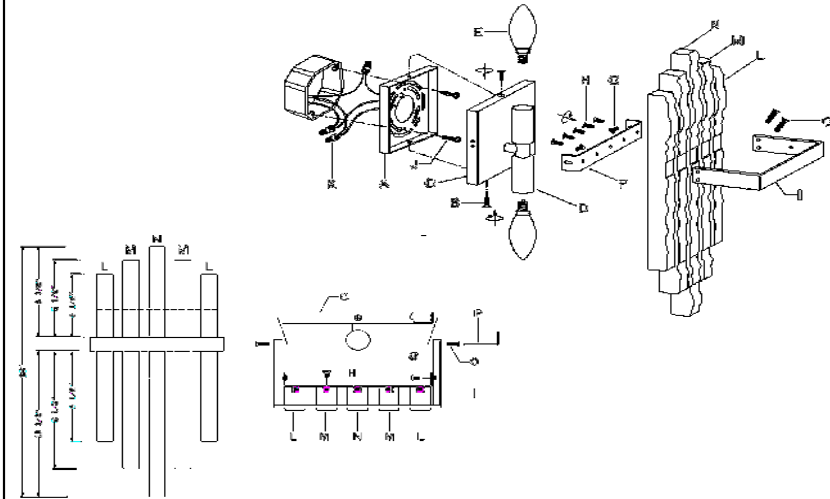

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Screws (H)	Qty: 5 Pcs
Set Screw (B)	Qty: 2 Pcs	U shaped metal bar (I)	Qty: 1 Pc
Lamp Body (C)	Qty: 1 Pc	Small Alabaster (L)	Qty: 2 Pcs
Sockets (D)	Qty: 2 Pcs	Medium Alabaster (M)	Qty: 2 Pcs
Bulb (not include) (E)	Qty: 2 Pcs	Large Alabaster (N)	Qty: 1 Pc
Folding Iron (F)	Qty: 1 Pc	Hex screw (O)	Qty: 4 Pcs
Screws (G)	Qty: 2 Pcs	Allen Wrench (P)	Qty: 1 Pc

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs


TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.



We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150

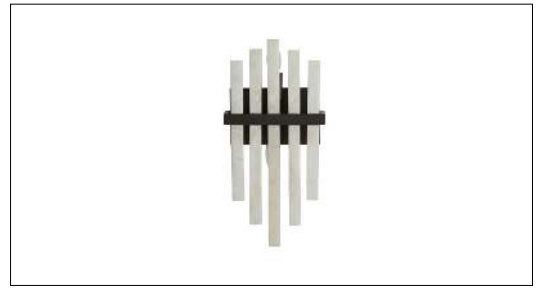

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J), then tighten screws with a screwdriver.
3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
5. Attach the lamp body(C) to the mounting plate(A) by using enclosed set screws (B) and tighten set screws(B) with screwdriver.
6. Insert 2 type B max Led 8W Bulb (not included) (E) into the Sockets(D). Do not exceed specified wattage.
7. Attach the Small Alabaster (L), Medium Alabaster (M) and Large Alabaster (N) to the folding iron(F), make sure the holes are aligned together, then tighten with screws(H) secure the alabaster.
8. Attach the Folding Iron (F) to be align with the side holes on the U shaped metal bar (I) , then tighten with screws (G).
9. Attach the 4 side holes on the U shaped metal bar (I) to the lamp body (C), screw with Hex screw(O) then tighten with Allen wrench (P).
10. Restore power to junction box and test fixture.

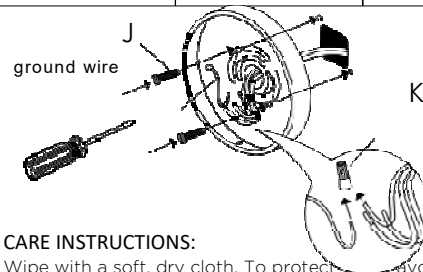

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the fixture, avoid the use of

ARTERIO RS