

# ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DW63

NAME: Jenner Sconce

MATERIAL TYPE: Steel



FINISH: Antique Brass

SOCKET TYPE: LED

SOCKET QTY: 2

BULB WATTAGE: LED 12W /2700K / 90+CRI

VOLTAGE: 110V-120V

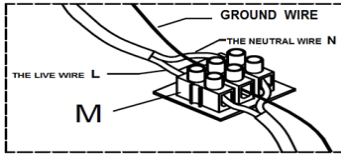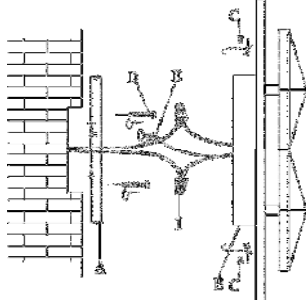

**PLEASE IGNORE THIS DEVICE IN THE LAMP BASE**

<p><b>F Plastic wire connectors</b></p>	<p><b>K Anchor</b></p>
<p><b>TOOLS NEEDED(NOT INCLUDED)</b></p> <p><b>G SCREWDRIVER</b></p>	<p><b>L Strengthen screw</b></p>

## PARTS INCLUDED:

Mounting Plate(A)	Qty:1
Back Plate(B)	Qty:1
Canopy Screw(C)	Qty:2
Mounting Screw(D)	Qty:2
Plastic Wire Connector(F)	Qty:3

## HARDWARE INCLUDED:


Mounting Screws	Qty: 2PCS
Plate Screw	Qty: 2PCS
Green Ground Screw	Qty: 1PC
Plastic Wire Connector	Qty: 3PCS

## TOOLS NEEDED (Not Included):

1 Screwdriver
---------------

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

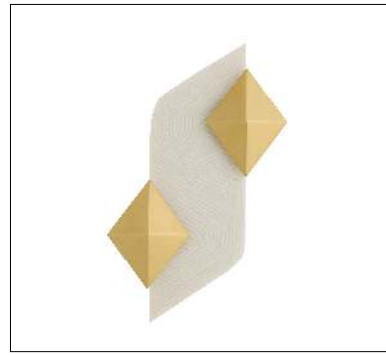

## TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from junction box and allow to hang.
4. Remove the mounting plate(A) from the back plate(B) by loosening the Canopy Screw (C) using a Phillips screwdriver.
5. Place the mounting plate(A) over the center of the junction box.
6. Align the holes in the mounting plate (A) with the holes in the junction box and secure it with two mounting screws (D). Secure the screws using a Phillips head screwdriver.
7. Connect ground wire from wall to ground wire from lamp using Plastic Wire Connector(F).
8. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps
 

**DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
9. PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE WIRE TO THE DEVICE (M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.
10. Gently tuck the wire connections neatly into the junction box.
11. Attach the back plate (B) to the mounting plate (A) using 2 PCS Canopy Screw (C), and tighten them with a screwdriver.
12. Restore power to junction box and test fixture.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS