

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DWC88

NAME: LOGAN SCNCE

MATERIAL TYPE: IRON, GLASS

FINISH: ENGLISH BRONZE, TEXTURE
BRONZE, CLEAR SEEDY

SOCKET TYPE: LED



SOCKET QTY: 2

BULB WATTAGE: 7.8W/2700K/90+CRI

VOLTAGE: 100V-130V

ITEM NET WEIGHT: 7.2LBS

**PLEASE IGNORE THIS DEVICE IN
THE LAMP BASE**

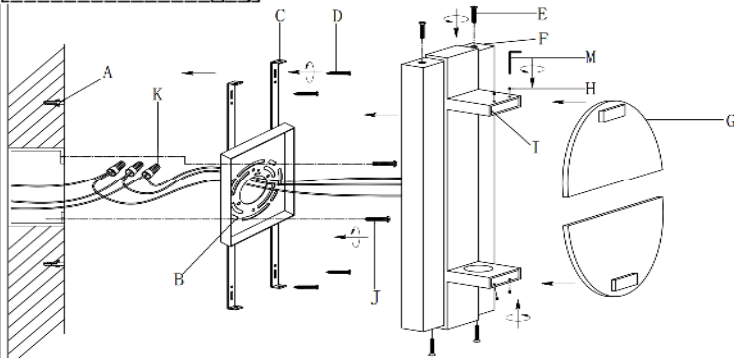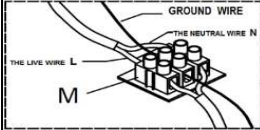

PARTS INCLUDED:

Mounting Plate (B)	Qty: 1 Pc	Lamp Base (F)	Qty: 1 Pc
Back Plate (C)	Qty: 1 Pc	Glass Shade (G)	Qty: 2 Pcs
Canopy Screw (E)	Qty: 4 Pcs	Hex Screw (H)	Qty: 4 Pcs

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs
Plastic anchor (A)	Qty: 4Pcs
Strengthen screw (D)	Qty: 4Pcs
Allen Wrench (M)	Qty: 1Pc

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.



We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Drill 4 holes in wall to align with 4 holes of Back Plate(C), insert plastic anchors(A) into drilled holes. Attach mounting plate(B) to wall or junction box using mounting screws (J).
4. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
5. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
6. Attach and fasten Back Plate(C) to wall by screwing the 4 strengthen screws(D) provided in the plastic anchors(A)
7. PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE TERMINAL BLOCK (M) IN THE LAMP BASE. IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.
8. Attach lamp base (F) to back plate (C) by inserting canopy screws (E) through predrilled holes then tighten using screwdriver.
9. Assemble the glass shade (G) with lamp base (F) by using hex screw (H) with the allen wrench (M) until tight. Before assemble the glass shade(G), loosen the hex screws(H) first then tighten with allen wrench(M) after assembling the glass shade(G). Be sure all the hex screws(H) are tight enough.
10. Restore power to junction box and test fixture.

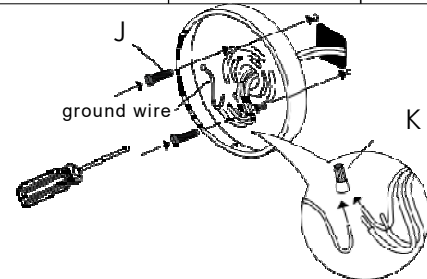

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS