

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DWC92

NAME: NAYA SCONCE

MATERIAL TYPE: IRON

FINISH: LIGHT ANTIQUE BRASS HAMMER


SOCKET TYPE: E12

SOCKET QTY: 1

BULB WATTAGE: 40W or /CFL 9W or /LED 4W

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 2.4LBS

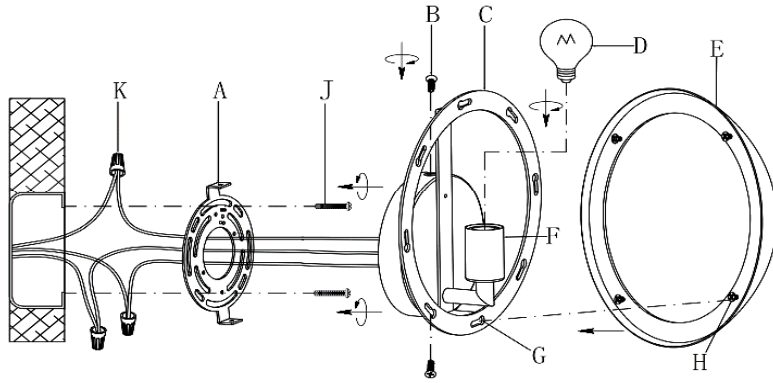

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Socket (F)	Qty: 1 Pc
Canopy Screw (B)	Qty: 2 Pcs	Metal Bracket (G)	Qty: 8 Pcs
Lamp Base (C)	Qty: 1 Pc	Mounting Screwhead (H)	Qty: 4 Pcs
Metal Shade (E)	Qty: 1 Pc		

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs


TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.



We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150

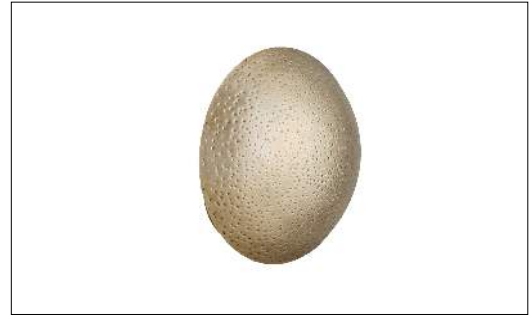

TO ASSEMBLE:

- Shut off the main electrical supply from the main fuse box/circuit breaker.
- Attach mounting plate(A) to wall or junction box using mounting screws (J).
- Connect ground wire from wall to ground wire from lamp using the wire caps (K).
- Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- Attach lamp base (C) to mounting plate (A) by inserting canopy screws (B) through predrilled holes. Then tighten by using screwdriver.
- Insert 1 TYPE-G 40W or /CFL 9W or /LED 4W bulb(not included) into socket(F). **DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.**
- Attach the screwhead(H) of the metal shade (E) onto the metal bracket notch (G) then rotate in clockwise direction to secure
- Restore power to junction box and test fixture.

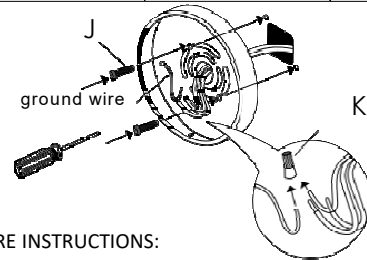

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS