

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


Item No.: GDWPI02

Name: Drift Wall Plaque

Material Type: Brass clad

Finish: Bronze

Item Net Weight: 99.09 lbs

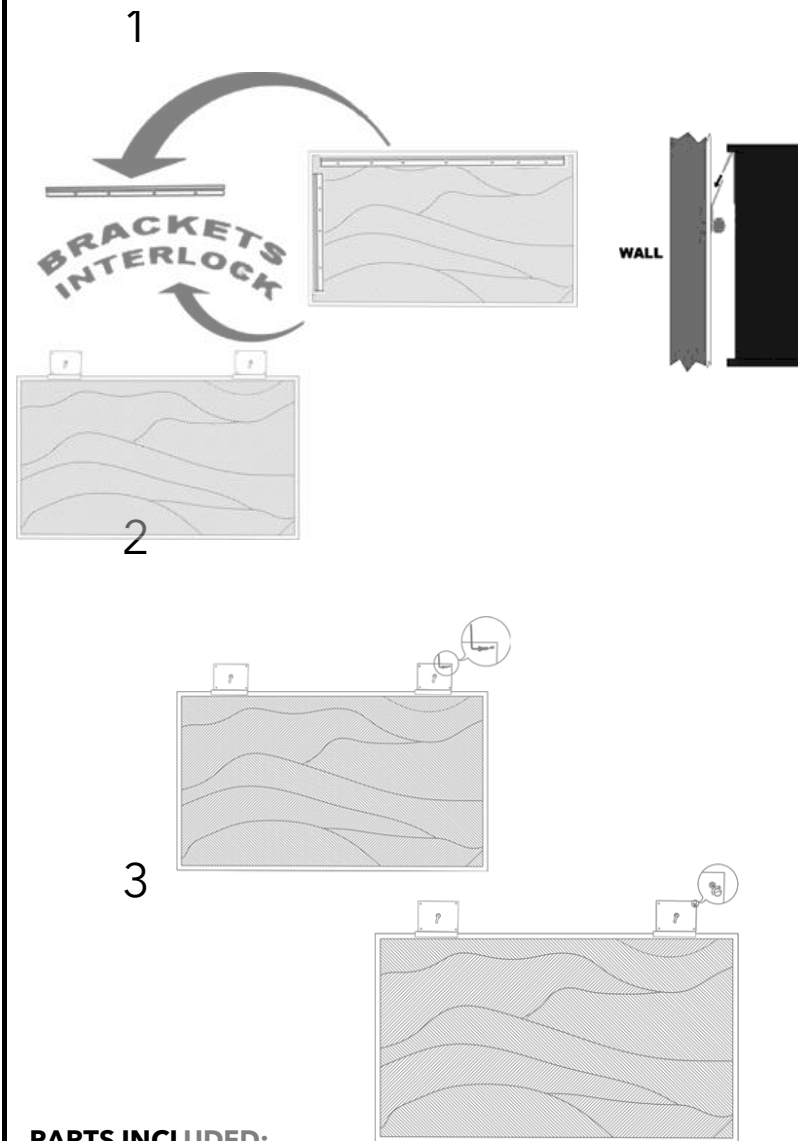

PARTS INCLUDED:

Security Cleat (48")	Qty: 1
Security Cleat (30")	Qty: 1
Drywall Anchors	Qty: 20
Screws	Qty: 6
Decorative Objects	Qty: 2
D-Nut	Qty: 8
Screw Cap	Qty: 8
Allen Bolt M8x12mm	Qty: 8
Allen Key M5	Qty: 1



• Do not throw away packaging materials until assembly is complete.

• Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.

TO ASSEMBLE:

1. Determine the final placement of the wall decor on the wall.
2. Position the security cleat at the desired location and mark the hole openings on the wall.
3. Drill small pilot holes at the marked locations and insert the wall anchors until they are flush with the wall.
4. Place the cleat over the wall anchors and secure it by driving the wall screws through the cleat and into the anchors.
5. To mount the wall decor, slide the back panel cleat onto the wall cleat and ensure it is properly seated as shown in figure 1.
6. Place the decorative objects in the desired locations on the wall decor and mark the corresponding hole positions on the wall.
7. Remove the decorative objects. Drill the marked holes in the wall and insert the D-nuts into all holes.
8. Reinstall the decorative objects onto the wall decor. Turn the Allen bolt clockwise while pressing firmly to prevent the decorative object from moving.
9. Tighten the Allen bolt using an Allen key until resistance is felt, as shown in Figure 2.
10. Finally, tighten the screw cap clockwise into the Allen bolt, as shown in Figure 3.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS