

# ASSEMBLY INSTRUCTIONS




## ITEM DESCRIPTION:

ITEM NO.: WMI05

NAME: TRIXIE MIRROR

MATERIAL TYPE: Iron, Glass FINISH: Antique Brass /Glass


ITEM NET WEIGHT: 47.40 Lbs

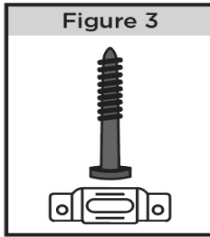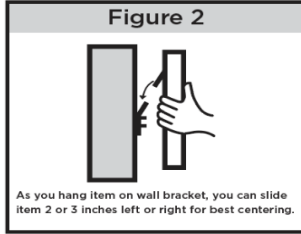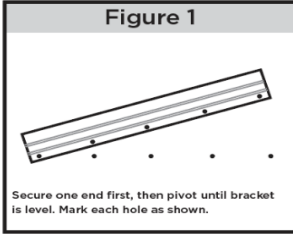

## PARTS INCLUDED:

Mirror	Qty: 1
Security Cleat (24")	Qty: 1
Drywall Anchors	Qty: 7
Screws	Qty: 7
T-SCREWS	Qty: 1
Large Drywall Anchors for T-Sc	Qty: 1

FIG-2

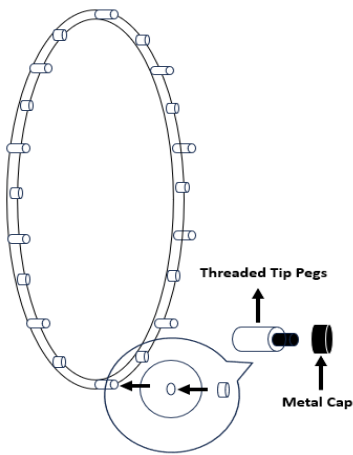

- Do not throw away packaging materials until assembly is complete
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.

## TO ASSEMBLE:

1. Position mirror in desired location on wall.
2. Position security cleat in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Remove security cleat from the wall.
4. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
5. Place security cleat over anchors and insert; then tighten all screws.
6. Hang mirror on wall bracket, as shown in Figure 2.
7. Now, align Bottom T-Screw on wall with Bracket, as shown in Figure 3 and use wrench clockwise on T-Screw so that it locks mirror from moving forward.
8. To fix the glass disc, align the hole of glass with threaded peg and tight it with the metal cap as shown in Fig-2 at bottom of left side.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS