

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: WMI68

NAME: Gregory Mirror

MATERIAL TYPE: Mango Wood FINISH: Ebony

ITEM NET WEIGHT: 58 LBS

Figure 1




Secure one end first, then pivot until bracket is level. Mark each hole as shown.

Figure 2



As you hang item on wall bracket, you can slide item 2 or 3 inches left or right for best centering.

Figure 3

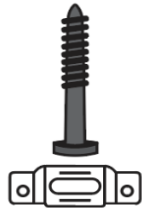

PARTS INCLUDED:

Mirror	Qty: 1
Security Cleat (36")	Qty: 1
Drywall Anchors	Qty: 10
Screws	Qty: 10
T-SCREWS	Qty: 1
Large Drywall Anchors for T-Screws	Qty: 1
Anti-tip Kit	Qty: 2



Figure-2

NOTE: Please use this Anti Tip kit behind the Mirror for safety.



- Do not throw away packaging materials until assembly is complete
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- This mirror can be mounted vertically and horizontally.
- This can also be lean against the wall in vertical position with the help of Safety Bracket as per Figure-2 below.

TO ASSEMBLE:

Option 1

When using the item as a floor mirror resting against a vertical support, use the Anti tip Kit Provided to secure it from tipping forward accidentally.

Option 2

1. Position mirror in desired location on wall.
2. Position security cleat in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Remove security cleat from the wall.
4. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
5. Place security cleat over anchors and insert; then tighten all screws.
6. Hang mirror on wall bracket, as shown in Figure 2.
7. Now, align Bottom T-Screw on wall with Bracket, as shown in Figure

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.