

ASSEMBLY INSTRUCTIONS




ITEM DESCRIPTION:

ITEM NO.: WMI73 NAME: JUNI FLOOR MIRROR

MATERIAL TYPE: MANGO WOOD

FINISH: WHITEWASH

ITEM NET WEIGHT: 96 Lbs

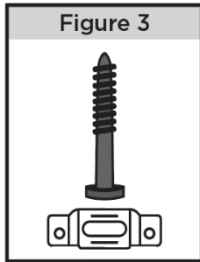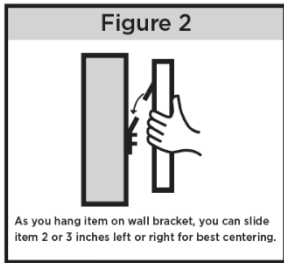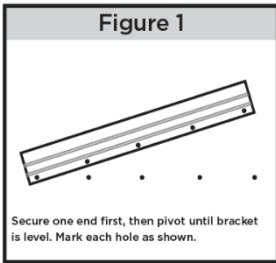

- Do not throw away packaging materials until assembly is complete
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- This mirror can be mounted vertically or horizontally

TO ASSEMBLE:

1. Position mirror in desired location on wall.
2. Position security cleat in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Remove security cleat from the wall.
4. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
5. Place metal cleat (B) over anchors and insert; then tighten all screws.
6. At bottom of wall, mark for T-Screw (E) accordingly and tighten the same till threading on T-Screw is inserted in the wall.
7. Hang mirror on wall bracket, as shown in Figure 2.
8. Now, align Bottom T-Screw on wall with Bracket, as shown in Figure 3 and use wrench clockwise on T-Screw so that it locks mirror from moving forward.

PARTS INCLUDED:

Mirror (A)	Qty: 1
Security Cleat (B)	Qty: 1
Drywall Anchors (C)	Qty: 1
Screws (D)	Qty: 16
T-Screw (E)	Qty: 1
Anti Tip Kit (F)	Qty: 2



NOTE: Please use this Anti Tip kit behind the Mirror for safety.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS