

# ASSEMBLY INSTRUCTIONS



## ITEM DESCRIPTION:

ITEM NO.: WPI05      NAME: Freya Wall Plaques, Set of 3

MATERIAL TYPE: Iron      FINISH: Blackened Iron

ITEM NET WEIGHT: 26.5 LBS

FIG-1

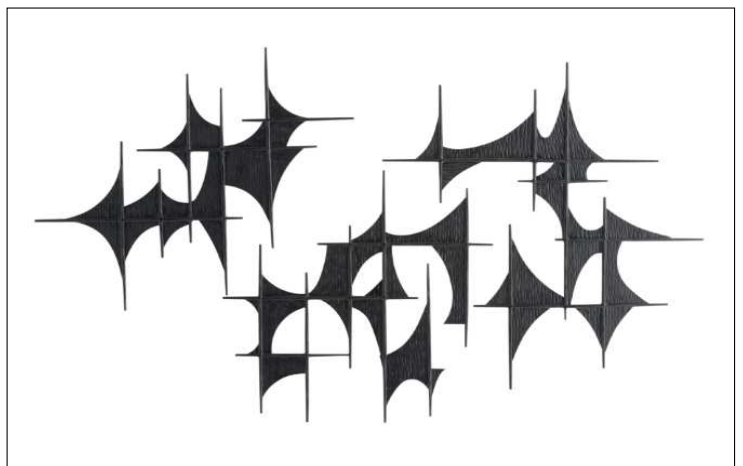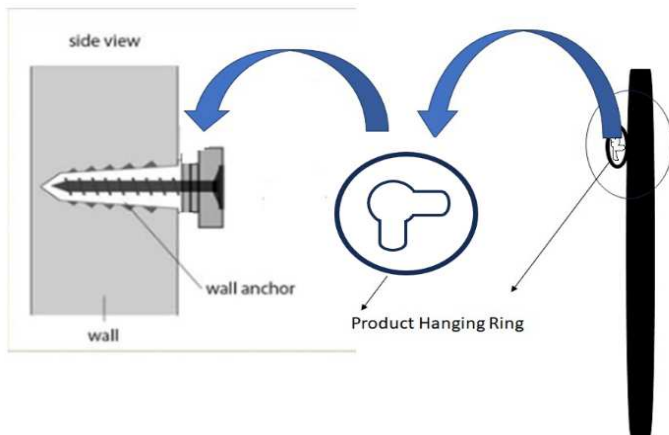

- Do not throw away packaging materials until assembly is complete
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.

## TO ASSEMBLE:

1. Position wall decor in desired location on wall.
2. Position the screw in desired location and mark location of each dry wall anchor installation, as shown in Figure 1.
3. Drill 5/16" pilot holes in wall. Position dry wall anchor over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
4. Hang decor on wall bracket, as shown in Figure 1.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

## PARTS INCLUDED:

Decor	Qty: 3
Drywall Anchors	Qty: 7
Screws	Qty: 7