

# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 89651

NAME: Rosabel Chandelier

MATERIAL TYPE: Steel/Alabaster


FINISH: Antique Brass/White

SOCKET TYPE: Integrated LED SOCKET QTY: 8

BULB WATTAGE: 50W LED

VOLTAGE: 110-120 V

ITEM NET WEIGHT: 31.3LBS

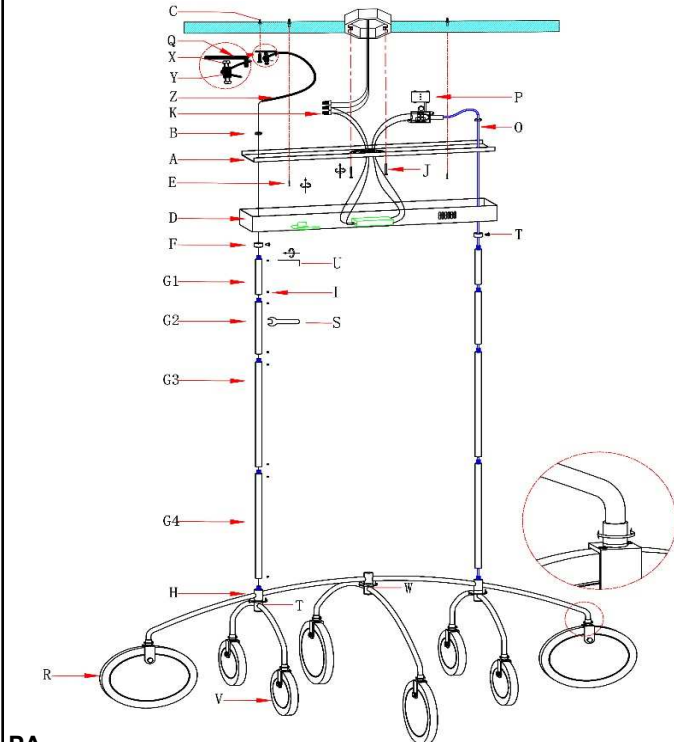

### PARTS INCLUDED:

A MOUNTING PLATE	1 PC	P 2-WIRE TERMINAL	1 PC
B HEX NUT	2 PCS	T SCREW	2 PCS
D CANOPY	1 PC	Q BRACKET	1 PCS
F COLLAR LOOP	2 PCS	X SCREW	2 PCS
G1.2.3.4 RODS	2 PCS	X SCREW	2 PCS
H LAMP BODY	1 PC	Y COUPLING	1 PCS
I HEX SCREW	16 PCS	Z AIRCRAFT WIRE	1 PCS
O POWER CABLE	1 PC		

### HARDWARE INCLUDED:

K Plastic Wire Connector	U Allen Wrench
J Mounting Screws	S Wrench
Green Ground Screw	C Anchor
E Strengthened Screw	

### TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

### TO ASSEMBLE:

1. Remove all packing contents and parts from the carton(s) carefully. Ensure you have all parts indicated before you begin assembly.
2. Shut off the main electrical supply from the main fuse box/circuit breaker.
3. Position fixture in desired location on ceiling. The mounting plate features (2) holes for screw mounting. Mark these spots on the ceiling with a pencil to drill holes. Drill 2 holes on these spots and insert anchors(c) into drilled holes.
4. Screw the rod(g4) to lamp body(h) till tight, repeat the same operation on the rod(g3), rod(g2) and rod(g1) when you connect the rods, loosen the small hex screws(i) in the side hole first then tighten with Allen wrench(u) after all rods are connected. Be sure all the hexangular screws are tight enough.
5. Connect rod(g1), collar loop(f), canopy(d) & mounting plate(a) with nipple on mounting plate(a), and tighten the hex nuts (b) with a wrench (s). Repeat the same operations on another side.
6. Pull the electrical cord of "j box" through the exit hole of the mounting plate.
7. Drill one hole on the ceiling and insert anchor(c) into drilled hole, then fix bracket(q) to the ceiling with strengthened screw (e) by screwing into anchor. Remove the coupling(y) from the aircraft wire(z) by loosening (2) screws(x). Pass the aircraft wire(z) through (2) holes on the bracket(q). Then pass the aircraft wire(z) through (2) holes on the coupling(y) and fix with (2) screws(x) as fig1 (more details on next page). Be sure to tighten two screws attached on the coupling(y).
8. Please pay special attention that you do not need to connect the wire connect device(m). It is used for the wire connection for euro-market.
9. Carefully inspect the fixture wires. The neutral fixture wire has very fine ridges molded into its plastic covering. The hot fixture wire has a smooth covering. The bare silver wire is the grounded wire.
10. Attach the ground wire from the fixture to the ground junction box wire from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (a) facing down, and wrap the fixture's bare ground wire around the ground screw. It is imperative that the outlet box in your home be properly grounded.
11. Connect the neutral fixture wire to the neutral junction box wire (usually white). Fasten each together with a wire connector (k) and wrap the connection with electrical tape. Be sure no strands are exposed.
12. Connect the hot fixture wire to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (k) and wrap the connection with electrical tape. Be sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
13. Connect the lamp input power cable(o) usually black and white wire, according to the principle of connecting the black wire to the + pole and the white wire to the - pole to the 2-wire terminal (p), and then cover the 2-wire terminal (p) cap.
14. Gently tuck the wire connections neatly into the junction box
15. Attach the mounting plate (a) with nipple to the ceiling outlet box using the mounting screws (j) and tighten screws with a screwdriver. Attach the strengthened screw(d) with nipple to the anchor) and tighten screws with a screwdriver.
16. Attach canopy(d) to the mounting plate(a) by using the collar loop(f), tighten screws) with screwdriver. Repeat the same operations on another side.
17. Rotate (r)(t)(w)(v) clockwise or counterclockwise to adjust the position.
18. Restore power to the junction box and test fixture.

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS